 
 



## Intake Kit Installation Instructions: 2004-2005 Ford F-150 5.4L V8

Step 3

	9- MG washers		ve proceeding with actual installation.
	3x043cm 9M -0		
	5- M6 x 12 hex head screws		see confirm Parts List and read all instructions
dlud "4\S ls92 miT -"35	4- M6 Button head screws		
1- Hose, Vent (5/16" x 17")	1- MAS sensor gasket	T-20 Torx Bit	
1- Coupler (3.5" x 4.0")	1- Housing support tab	Ratchet and extension	5004-2006
1- Coupler (4" x 3")	1- Intake tube support mount	Flathead screwdriver	Λ-8 2'⊄Γ
2- Nylon spacers 1/8"	<ol> <li>Intake tube rotomolded</li> </ol>	10mm socket	091-3
4- Clamps #064	1- Air filter Housing	5/16" nut driver	Ford
2- M6 Wavy washers	1- Air filter p/n# 24-90008	8mm socket	
5- 8-35 x 2/8" screws	Part List:	Tools Required	54-10512





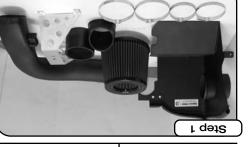

:''B9' :əuign3 :I9DOIVI :əyeM

Kit Part #

 
Complete kit with parts.







screws and washers. and tighten assembly with the provided Line up the mounting holes on the intake duct





and remove intake box.

≁ q∋i2

airbox to the new intake tube .Make sure you use the provided spacer and gasket. Transfer the MAF sensor from the factory

Disconnect the MAF sensor and breather tube on the sides of the airbox. Remove the 4 10mm screws holding the airbox to the intake manifold



Your installation is now complete. Check after a few hours of operation all hoses and clamps are tight and that all electrical com-ponents are secure.. Close hood slowly to verify hood clearance.



 
Remove intake air duct by grabbing firmly from both sides and pulling straight back and out.

Disconnect negative post from battery terminal.

the nuts and bolts using the supplied hardware. bracket and the radiator shroud and tighten all up the mounting holes with the rear support Position the housing into the engine bay. Line

 


 
grease. Install the housing trim seal on the sides of the panel by starting at one corner and working your way around the edge of Install the pre-oiled filter in the housing and tighten down clamp. DO-NOT use any oil or














Updated 3-4-05 06-80065 Note: Fliter Cleaning and Re-oiling: When cleaning your are fliter, be sure to use only afe's "Restore Kit" are P/N: 90-5000 yellow oil aerosol, or are P/N: 90-50501 blue squeeze bottle oil on Fliter Replacement: PN: 24-90008 (black w/blue media) or are p/N: 90-5000 yellow oil



 

 

 

∑ q∋t≳

Step 2

Complete stock intake.







button head screws and washers.

Step 5

intake manifold and fasten with the supplied M6

install the intake tube support bracket to the

engine bay and tighten, down the clamps. (see diagram below for correct coupler position) and the housing Position intake duct into Place urethane coupler on the throttle body



