



# Silver Bullet

Throttle Body Spacer

**PN 46-33007**


## Important!

Please verify the parts list and read all instruction steps before you begin installation.

**Make:** FORD

<b>Model</b>	<b>Year</b>	<b>Engine</b>	<b>Model</b>	<b>Year</b>	<b>Engine</b>
Mustang	05-08	4.0L			

1. Disconnect the Inlet Air Temperature (IAT) sensor on air inlet tube. Disconnect the crankcase vent tube from air inlet tube. Loosen and remove air inlet tube.
2. Disconnect the Throttle Position Sensor (TPS) and Fly-By-Wire (FBW) harnesses from throttle body. Loosen and remove throttle four body bolts.
3. Install the aFe Silver Bullet throttle body spacer (AIR IN engraving side faces the throttle body), a gasket and throttle body onto intake manifold. Using the washers and longer bolts secure the throttle body to intake manifold. Tighten the bolts to 10 Nm (89 lb/in).
4. Reconnect TPS and FBW harnesses to throttle body.
5. Install air inlet tube onto throttle body and air cleaner assembly. Reconnect the IAT sensor and crankcase vent to air inlet tube.

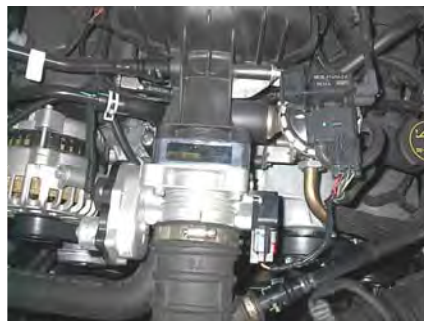

### Parts List

- 1 aFe Silver Bullet Spacer
- 1 Gasket
- 4 6mm x 60mm bolts
- 4 6mm lock washers
- 4 6mm flat washers