

Kit 78519

Ford Mustang SN95

Front Application



A CAUTION

SEE PAGE 12 BEFORE BEGINNNING INSTALLATION



INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.

MN-933 • (011505) • ERN 7995

TABLE OF CONTENTS

Introduction2Notation Explanation2Important Safety Notices2
Installation Diagram
Installing the Air Suspension 4 Preparing the Vehicle 4 Removing the Stock Suspension 4 Air Suspension Installation 6 Damping Adjustment 9 Aligning the Vehicle 9 Adjusting Extended or Drop Height Using Lower Mount 10
Before Operating
Product Use, Maintenance and Servicing. 14 Suggested Driving and Maximum Air Pressures. 14 Maintaining and Operating 14
Troubleshooting Guide14
Frequently Asked Questions14
Tuning the Air Pressure15
Checking for Leaks
Fixing Leaks15
Warranty & Return Policy
Replacement Information
Contact Information



Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of this Ford Mustang SN95 Performance kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information includes a hardware list, step-by-step installation information, maintenance tips, safety information and a troubleshooting guide.

Air Lift Performance reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Performance at (800) 248-0892 or visit our website at www.airliftperformance.com.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.



INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Indicates a procedure, practice or hint which is important to highlight.

IMPORTANT SAFETY NOTICES

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and passengers that the vehicle is designed to carry. Payload is GVWR minus the Base Curb Weight.




DO NOT INFLATE AIR SPRINGS WHILE OFF OF THE VEHICLE. DAMAGE TO ASSEMBLY MAY RESULT AND VOID WARRANTY.



DO NOT WELD TO, OR MODIFY PERFORMANCE STRUTS/SHOCKS IN ANY WAY. DAMAGE TO UNIT MAY OCCUR AND WILL VOID WARRANTY.



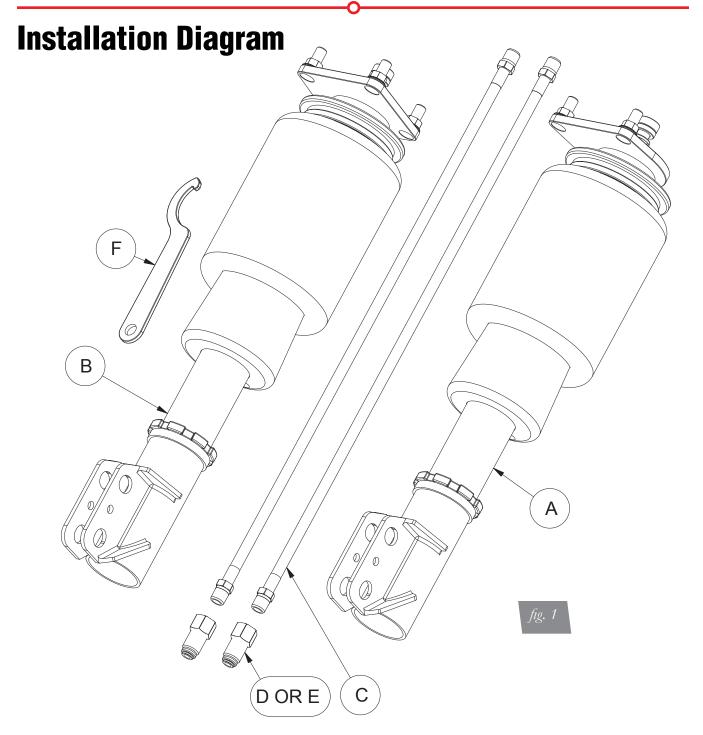

HARDWARE LIST

Item A B C D	Part # 35303 35302 20997 21810 21987	Description
F		Spanner Wrench1

STOP!

Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

Installing the Air Suspension

PREPARING THE VEHICLE

- 1. Elevate and support the vehicle from approved lifting points.
- 2. Remove the front wheels (fig. 2).



REMOVING THE STOCK SUSPENSION


1. Unthread the stabilizer bar end link nuts from the bar (figs. 3 and 4).





2. Unbolt and remove the brake caliper and rotor. Secure them out of the way taking care to prevent strain on the brake line (figs. 5 and 6).



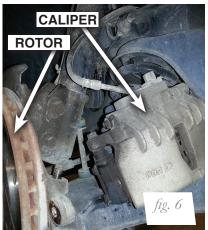



5

3. Remove the sensor wire and bracket from the lower strut mount (figs. 7-9).







4. Unclip the sensor wire from the two attaching points within the fender housing and move the wire aside (figs.10 and 11).





5. Remove coil spring (fig. 12).





THE COIL SPRING IS UNDER LOAD, USE FACTORY SERVICE INSTRUCTIONS TO REMOVE THE COIL SPRING.

6. Remove the three upper bracket nuts and remove the strut (fig. 13).




7. Remove the rivets holding the upper mount support bracket. Make certain the entire rivet has been removed (figs. 14 and 15).



AIR SUSPENSION INSTALLATION

 Install the leader line into the air spring. Apply thread sealant to the threads of the leader hose. Tighten the appropriate fitting to the air line (one and three-quarter turns beyond hand-tight). Tighten the leader line into the air spring (one and three-quarter turns beyond hand-tight) (fig. 16).

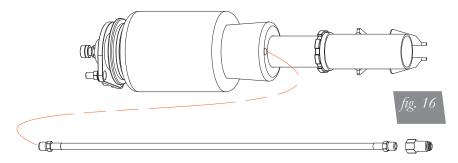




 Attach the upper mount to the slotted strut tower (fig. 17), positioned completely inboard at limit of slots towards the engine. Re-install upper support bracket. Torque nuts to 34 Nm (25 ft-lbs). (Support bracket is not shown in figure 17 to show mount position in slots.)

A CAUTION

DO NOT POSITION THE UPPER MOUNT OUTBOARD (AWAY FROM THE ENGINE). DRIVING VEHICLE WITH UPPER MOUNT POSITIONED OUTBOARD MAY CAUSE THE AIR SPRING TO CONTACT THE CHASSIS, WHICH COULD DAMAGE THE AIR SPRING (FIG. 18).



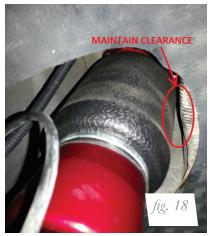

 Align the lower mount holes with the knuckle and reinstall the bolts through the knuckle (fig. 19). Camber is adjusted with the slots in the lower mount (fig. 20). Torque to 190 Nm (141 ft-lbs.).





4. Reattach the sensor wire bracket and clip the wire to the fender housing (figs. 21 and 22). Torque the sensor bracket nut to 23 Nm (17 ft-lbs.).





MN-933 7

5. Reinstall the brake rotor and brake caliper (fig. 23). Torque the brake caliper bolts to 88 Nm (65 ft-lbs.).



6. Reattach the stabilizer end link (figs. 24 and 25). Torque the nut to 16 Nm (11 ft-lbs.).





NOTE

See CAUTION on page 12 before proceeding.

- 7. Fully compress the suspension using a jack. With the suspension compressed, review the best routing for the leader hose that is clear of all suspension components. Routing should also allow for the suspension to extend and compress without kinking or pulling the line tight or rubbing on other components. Following the brake line routing is often a good place to start. Check clearances to all other components.
- 8. With the suspension fully compressed, take a measurement from the fender to some reference point typically the center of the axle. Record this measurement as Max Compression.



- 9. Cycle the suspension to Max Extension and record the measurement from the same reference points.
- 10. Add ME and MC then divide by 2. Set the suspension to this point. This position will give 50% stroke in either direction and is a starting point for ride height (fig. 26).

Formula for Calculating Ride Height

(ME+MC)÷2=MID STROKE

11. With the suspension at this position, loosen, then re-torque the lower control arm bolts to manufacturer's specifications (Table 1).

Torque Specifications					
Location	Nm	ft-lbs.			
Camber plate to chassis nuts	34	25			
Strut lower mount bolt/nuts	190	141			
Sensor wire bracket nut	23	17			
Stabilizer end link nuts	16	11			
Wheel lugs	115	85			
Air fitting (use thread sealant)	1-and-3/4 turns b	eyond hand-tight			

Table 1

DAMPING ADJUSTMENT

The dampers in this kit have 30 settings, or "clicks", of adjustable compression and rebound damping characteristics. Damping is changed through the damper rod using the supplied adjuster (figs. 27 and 28) or a 3mm allen wrench.

Turn the adjuster clockwise and the damping settings are hardened. Turn the adjuster counterclockwise and the damping is softened.

Each strut is preset to "-15 clicks". This means that the damper is adjusted 15 clicks away from full stiff. Counting down from full stiff is the preferred method of keeping track of, or setting, damping. This setting was developed on a 2002 Mustang GT and may need to be adjusted to different vehicles and driving characteristics.



ALIGNING THE VEHICLE

- Using the control system, set the vehicle height to the new custom ride height.
- 2. If the custom ride height is lower than stock, we recommend loosening all pivot points (bolts, nuts) on any control arm, strut arm or radius rod that contains bushings. Once they have been loosened, re-torque to stock specifications.

NOTE


It may be necessary to cycle the suspension to loosen the bushing up from its mount. This will help re-orient the bushing at its new position and increase life of the bushings based on the custom ride height.

MN-933 9

ADJUSTING EXTENDED OR DROP HEIGHT USING LOWER MOUNT

Your struts have been pre-set at the factory to provide maximum drop height while maintaining adequate tire clearance to the air spring. If you wish to gain more extended height (lift), which is the same as reducing drop height, or want to lower the chassis further and there is still adjustment available at the lower mount, please use the following procedure:

- 1. Support the vehicle with jack stands or a hoist at approved lifting points.
- 2. Remove the wheel.
- 3. Using the supplied spanner wrench, loosen the lower locking collar (fig. 29).

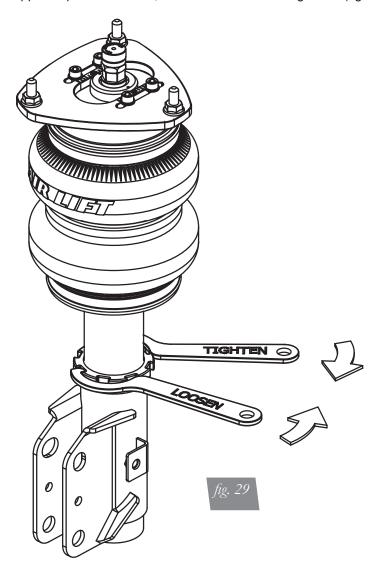

- 4. Deflate the air spring to 0 PSI on the corner you are adjusting.
- 5. Disconnect lower mount from suspension.
- 6. Spin the lower mount to the desired location.

NOTE

Not all models will have further drop height available.

- 7. Re-install lower mount to suspension and torque fasteners.
- 8. Tighten the lower locking collar to the lower mount using significant force.






WHEN ADJUSTING HEIGHT UPWARDS, MAKE SURE THAT THE STRUT BODY ENGAGES ALL THE THREADS OF THE LOWER MOUNT (FIG. 30). WHEN ADJUSTING DOWNWARDS, MAKE SURE THERE IS ADEQUATE AIR SPRING CLEARANCE TO THE TIRE/WHEEL ASSEMBLY. CLEARANCE MUST BE CHECKED WITH SYSTEM FULLY DEFLATED AS WELL AS FULLY INFLATED TO ENSURE THAT NO RUBBING OCCURS. FAILURE TO MAINTAIN ADEQUATE CLEARANCE CAN RESULT IN AIR SPRING FAILURE AND WILL NOT BE COVERED UNDER WARRANTY.

A CAUTION

DO NOT ADJUST HEIGHT BY SPINNING AIR SPRING ON STRUT! DOING SO MAY CAUSE AN AIR LEAK AND COMPROMISE THE ASSEMBLY.

FOR STRUTS: FOR SHOCKS:

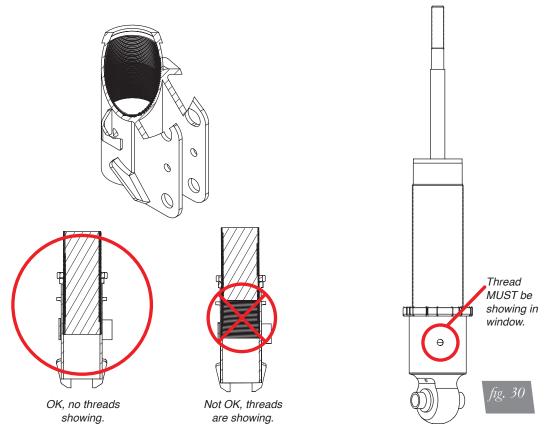

MN-933 11





AFTER INITIAL INSTALLATION OF YOUR STRUTS/SHOCKS:

- DO NOT CYCLE THE SUSPENSION WITH THE AIR-LINE CONNECTED TO THE LEADER HOSE WITHOUT FIRST ADDING AIR SPRING PRESSURE. DOING SO MAY CAUSE THE AIR SPRING TO IMPROPERLY INFLATE (FIG. 31). IT IS SAFE TO CYCLE THE SUSPENSION TO CHECK FOR CLEARANCES ETC. WITH THE LEADER HOSE OPEN TO ATMOSPHERE (DISCONNECTED FROM AIR-LINE).
- BEFORE SETTING VEHICLE ON THE GROUND FOR THE FIRST TIME, IT IS VERY IMPORTANT TO INFLATE THE AIR SPRINGS TO AT LEAST 50 PSI. THIS WILL PREVENT ANY POSSIBILITY OF THE AIR SPRING KICKING OUT AND CAUSING A LEAK (FIG. 32).





Caused by cycling with airline attached without pressure. Remove air-line from spring to release vacuum and re-attach. Inflate to 50+ PSI before lowering car to ground.





Shows what spring looks like after lowering car to ground with <50psi and raising it with air pressure.

Do NOT drive!





Shows what spring looks like when installed correctly.



Before Operating



MAKE SURE THE FRONT WHEELS ARE STRAIGHT WHEN DEFLATING AND REINFLATING AIR BAGS.

- 1. Inflate and deflate the system (do not exceed 125 PSI) to check for clearance or binding issues. With the air springs deflated, check clearances on everything so as not to pinch brake lines, vent tubes, etc. Clear lines if necessary.
- 2. Inflate the air springs to 75-90 PSI and check all connections for leaks.
- 3. Air Lift part #27669 or #27671, AutoPilot V2 Air Management System, is highly recommended for this product.
- 4. Please familiarize yourself further with this product by reading the Product Use, Maintenance and Servicing section.

INSTA	 ATIC	NI (CKI	ICT
11V3 I A		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	. 8		131

ast 1/2" the tire,
ections
" for air no heat
ate the neck for
ew the of the
e'

POST-INSTALLATION CHECKLIST

be fixed. Either fix the leak yourself or return to the installer for service.
Air pressure requirements — Regardless of load, the air pressure should always be adjusted to maintain adequate ride height at all times while driving.

Overnight leak down test — Recheck air pressure after the vehicle has been used for 24 hours. If the pressure has dropped more than 5 PSI, then there is a leak that must

☐ Thirty day or 500 mile test — Recheck the air spring system after 30 days or 500 miles, whichever comes first. If any part shows signs of rubbing or abrasion, the source should be identified and moved, if possible. If it is not possible to relocate the cause of the abrasion, the air spring may need to be remounted. If professionally installed, the installer should be consulted. Check all fasteners for tightness.

MN-933 13



Product Use, Maintenance and Servicing

Suggested Driving Air Pressure	Maximum Air Pressure			
60-75 PSI	125 PSI			
FAILURE TO MAINTAIN AREQUATE MINIMUM PRESCURE (OR RECOURE				

FAILURE TO MAINTAIN ADEQUATE MINIMUM PRESSURE (OR PRESSURE PROPORTIONAL TO LOAD) WILL RESULT IN BOTTOMING OUT, OVER-EXTENSION OR RUBBING AGAINST ANOTHER COMPONENT AND WILL **VOID THE WARRANTY**.

MAINTENANCE GUIDELINES

NOTE

By following these steps, vehicle owners will obtain the longest life and best results from their air spring.

- 1. Check the air pressure before driving.
- 2. Never inflate beyond 125 PSI.
- 3. If you develop an air leak in the system, use a soapy water solution to check all air line connections, before deflating and removing the spring.
- 4. When increasing load, always adjust the air pressure to maintain normal ride height. Increase or decrease pressure from the system as necessary to attain normal ride height for optimal ride and handling. Remember that loads carried behind the axle (including tongue loads) require more leveling force (pressure) than those carried directly over the axle.



FOR YOUR SAFETY AND TO PREVENT DAMAGE TO YOUR VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR), AS INDICATED BY THE VEHICLE MANUFACTURER. ALTHOUGH YOUR AIR SPRINGS ARE RATED AT A MAXIMUM INFLATION PRESSURE OF 125 PSI, THE AIR PRESSURE ACTUALLY NEEDED IS DEPENDENT ON YOUR LOAD.

- 5. Always add air to the springs in small quantities, checking the pressure frequently. Sleeves require less air volume than a tire and inflate quickly.
- 6. Should it become necessary to raise the vehicle by the frame, make sure the control system is turned off before lifting.

Troubleshooting Guide

- 1. Leak test the air line connections, the threaded connection into the air spring, and all fittings in the control system.
- 2. Inspect the air lines to be sure none are pinched. Tie straps may be too tight. Loosen or replace the strap and replace leaking components.
- 3. Inspect the air line for holes and cracks. Replace as needed.
- 4. Look for a kink or fold in the air line. Reroute as needed.

If the preceding steps do not solve the problem, it is possibly caused by a failed air spring — either a factory defect or an operating problem. Please call Air Lift at (800) 248-0892 for assistance.

Frequently Asked Questions

- Q. Will installing air springs increase the weight ratings of a vehicle?
 No. Adding air springs will not change the weight ratings (GAWR, GCWR and/or GVWR) of a vehicle. Exceeding the GVWR is dangerous and voids the Air Lift warranty.
- Q. How long should air springs last?
 If the air springs are properly installed and maintained they can last indefinitely.
- Q. Will raising the vehicle on a hoist for service work damage the air springs?

 No. The vehicle can be lifted on a hoist for short-term service work such as tire rotation or oil changes. However, if the vehicle will be on the hoist for a prolonged period of time, support the axle with jack stands in order to take the tension off of the air springs.



Tuning the Air Pressure

Pressure determination comes down to three things — level vehicle, ride comfort, and stability.

1. Level vehicle

If the vehicle's headlights are shining into the trees or the vehicle is leaning to one side, then it is not level. Raise the air pressure to correct either of these problems and level the vehicle.

2. Ride comfort

If the vehicle has a rough or harsh ride it may be due to either too much pressure or not enough. Try different pressures to determine the best ride comfort. See Air Lift suggested driving air pressure.

3. Stability


Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess. Tuning out these problems usually requires additional air pressure, strut damping, or both.

Checking for leaks

- 1. Inflate the air spring to 80 PSI.
- 2. Spray all connections and the inflation valves with a solution of 1/5 liquid dish soap and 4/5 water. Spot leaks easily by looking for bubbles in the soapy water.
- 3. After the test, deflate the springs to the minimum pressure required to restore the system to normal ride height.
- 4. Check the air pressure again after 24 hours. A 2-4 PSI loss after initial installation is normal. Retest for leaks if the loss is more than 5 PSI.

Fixing Leaks

- 1. If there is a problem with a swivel fitting:
 - a. Check the air line connection by deflating the spring and removing the line by pulling the collar against the fitting and pulling firmly on the air line. Trim 1" off the end of the air line. Be sure the cut is clean and square (see fig. 34). Reinsert the air line into the push-to-connect fitting.
 - b. Check the threaded connection by tightening the swivel fitting another ½ turn. If it still leaks, deflate the air spring, remove the fitting, and re-coat the threads with thread sealant. Reinstall by hand tightening as much as possible and then use a wrench for an additional two turns.
- 2. If the preceding steps have not resolved the problem, call Air Lift customer service at (800) 248-0892.

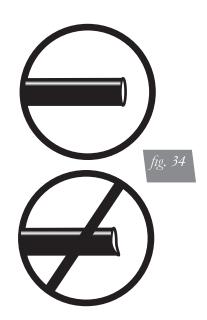

MN-933 15



Warranty and Returns Policy

Air Lift Performance warrants its performance products for one year to the original purchaser against manufacturing defects one year from the date of purchase when used on cars and trucks as specified under normal operating conditions. The warranty does not apply to products that have been improperly applied, improperly installed, or which have not been maintained in accordance with installation instructions furnished with all products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid, to the dealer from which it was purchased or to Air Lift Performance for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Performance • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Performance reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that may vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Performance customer service at (800) 248-0892 first if:

- · Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- · Wrong parts in the kit.
- · Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- · If there is a problem with the price.

Contact Information

If you have any questions, comments or need technical assistance contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144. You may also contact customer service anytime by e-mail at techsupport@airliftperformance.com.

For inquiries by mail, our address is PO Box 80167, Lansing, MI 48908-0167. Our shipping address for returns is 2727 Snow Road, Lansing, MI 48917.

You may also contact our sales team anytime by e-mail at sales@airliftperformance.com or on the web at www.airliftperformance.com.



Notes

Need Help?

Contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144.





Kit 78619

Ford Mustang SN95

Rear Application



INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.

TABLE OF CONTENTS

Introduction2Notation Explanation2Important Safety Notices2
Installation Diagram
Installing the Air Suspension 4 Preparing the Vehicle 4 Removing the Stock Suspension 4 Air Suspension Installation 6 Damping Adjustment 9 Aligning the Vehicle 9 Adjusting Extended or Drop Height Using Lower Mount 10
Before Operating
Product Use, Maintenance and Servicing
Troubleshooting Guide13
Frequently Asked Questions13
Tuning the Air Pressure14
Checking for Leaks
Fixing Leaks14
Warranty & Return Policy
Replacement Information
Contact Information



Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of this Ford Mustang SN95 Performance kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information includes a hardware list, step-by-step installation information, maintenance tips, safety information and a troubleshooting guide.

Air Lift Performance reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Performance at (800) 248-0892 or visit our website at www.airliftperformance.com.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.



INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Indicates a procedure, practice or hint which is important to highlight.

IMPORTANT SAFETY NOTICES

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and passengers that the vehicle is designed to carry. Payload is GVWR minus the Base Curb Weight.




DO NOT INFLATE AIR SPRINGS WHILE OFF OF THE VEHICLE. DAMAGE TO ASSEMBLY MAY RESULT AND VOID WARRANTY.



DO NOT WELD TO, OR MODIFY PERFORMANCE STRUTS/SHOCKS IN ANY WAY. DAMAGE TO UNIT MAY OCCUR AND WILL VOID WARRANTY.



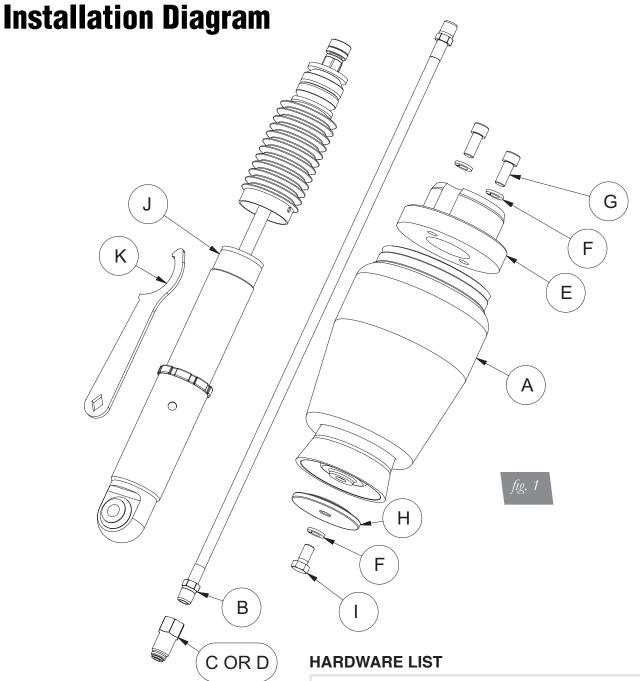

Item	Part #	DescriptionQty
Α	58543	Tapered Sleeve, Center Air Port2
В	20997	Leader Hose, 1/4" ID2
С	21810	Union, 1/4"FNPT X 1/4" PTC, DOT 2
D	21987	Union, 1/4"FNPT X 3/8" PTC, DOT 2
E	13315	Spacer, SN95 Upper Bracket, Rear 2
F	18427	3/8" Lock Washer 6
G	17445	3/8-24 X 7/8" Bolt 4
Н	13316	Spacer, Centering, SN952
- 1	17101	3/8-16 X 3/4" Hex Bolt
J	26768	Shock, SN95 Rear2
K		Spanner Wrench 1

STOP!

Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.



Installing the Air Suspension

PREPARING THE VEHICLE

- 1. Elevate and support the vehicle from approved lifting points.
- 2. Remove the rear wheels (fig. 2).



REMOVING THE STOCK SUSPENSION

1. Unbolt the stabilizer bar from the lower control arms (figs. 3 and 4).





2. Support the lower control arm and remove the bolt attaching it to the axle. Lower the control arm down and remove the coil spring. (figs. 5 and 6).







THE COIL SPRING IS UNDER PRESSURE, DO NOT UNBOLT THE CONTROL ARM WITHOUT SECURELY SUPPORTING THE ARM.



3. Reattach the lower control arm to the axle. Do not torque the bolt at this time (fig. 7).




4. Reinstall the stabilizer bar (figs. 8 and 9). Torque bolts to 47 Nm (35 ft-lbs.).





5. Unbolt the lower shock mount (figs. 10 and 11).

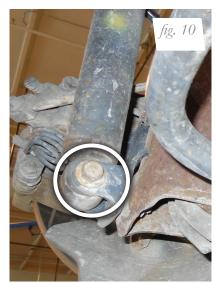



MN-934 5




6. Within the trunk, remove the carpet, unthread the rod nut and remove the shock from the vehicle (figs. 12 and 13).





AIR SUSPENSION INSTALLATION

1. Install the leader hose into the air spring. Apply thread sealant to the threads of the leader hose. Tighten the appropriate fitting to the air line (one and three-quarter turns beyond hand-tight). Tighten the leader line into the air spring (one and three-quarter turns beyond hand-tight) (fig. 14).

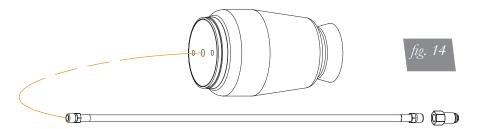

2. Attach the upper mount spacer to the air spring upper end cap with the supplied bolts and lock washers (fig. 15). Torque bolts to 27 Nm (20 ft-lbs.).





3. Route the leader hose through the hole in the center of the upper spring perch and out the windowed area facing the rear of the vehicle (fig. 16).



NOTE

Braided hose is not shown but routes in the same manner.

4. Insert the upper mount spacer into the upper coil spring seat (fig.17). Install the lower end cap over the lower coil spring seat (fig.18).





5. Reinstall the lower centering spacer with the supplied lock washer and bolt (figs. 19 and 20). Torque to 27 Nm (20 ft-lbs.).





Remove the shock rod nut, upper washer and bushing from the new shock. Insert the shock into the shock tower, aligning the lower mount hole with the shock mounting bracket and insert the lower shock bolt through the mount (figs. 21-23). Do not torque at this time.







7. Apply the upper bushing, washer and shock rod nut (fig. 24). Torque the rod nut to 27 Nm (20 ft-lbs.) (fig. 25). Thread the damping adjuster onto the rod (fig. 26).







- 8. Fully compress the suspension using a jack. With the suspension compressed, review the best routing for the leader hose that is clear of all suspension components. Routing should also allow for the suspension to extend and compress without kinking or pulling the line tight or rubbing on other components. Check clearances to all other components.
- 9. With the suspension fully compressed, take a measurement from the fender to some reference point typically the center of the axle. Record this measurement as Max Compression.
- 10. Cycle the suspension to Max Extension and record the measurement from the same reference points.
- 11. Add ME and MC then divide by 2. Set the suspension to this point. This position will give 50% stroke in either direction and is a starting point for ride height (fig. 27).

Formula for Calculating Ride Height

(ME+MC)÷2=MID STROKE

fig. 27



12. With the suspension at this position, loosen, then re-torque the upper and lower control arm bolts and lower shock bolts to manufacturer's specifications (Table 1).

NOTE

Re-clocking the control arm bushings is critical to good ride quality, handling and bushing life. Do not skip this step!

Torque Specifications					
Location	Nm	ft-lbs.			
Upper & lower air spring bolts	27	20			
Upper and lower trailing link	98-132	73-97			
Stabilizer end link nuts	47	35			
Shock rod nut	27	20			
Shock lower mounting bolt	72-103	57-75			
Wheel lugs	115	85			
Air fitting (use thread sealant)	1-and-3/4 turns beyond hand-tight				

Table 1

DAMPING ADJUSTMENT

The dampers in this kit have 30 settings, or "clicks", of adjustable compression and rebound damping characteristics. Damping is changed through the damper rod using the supplied adjuster (figs. 28 and 29) or a 3mm allen wrench.

Turn the adjuster clockwise and the damping settings are hardened. Turn the adjuster counterclockwise and the damping is softened.

Each strut is preset to "-25 clicks". This means that the damper is adjusted 25 clicks away from full stiff. Counting down from full stiff is the preferred method of keeping track of, or setting, damping. This setting was developed on a 2002 Mustang GT and may need to be adjusted to different vehicles and driving characteristics.



ALIGNING THE VEHICLE

- 1. Using the control system, set the vehicle height to the new custom ride height.
- 2. If the custom ride height is lower than stock, we recommend loosening all pivot points (bolts, nuts) on any control arm, strut arm or radius rod that contains bushings. Once they have been loosened, re-torque to stock specifications.


NOTE

It may be necessary to cycle the suspension to loosen the bushing up from its mount. This will help re-orient the bushing at its new position and increase life of the bushings based on the custom ride height.

ADJUSTING EXTENDED OR DROP HEIGHT USING LOWER MOUNT

Your dampers have been pre-set at the factory to provide maximum drop height while maintaining adequate tire clearance to the air spring. If you wish to gain more extended height (lift), which is the same as reducing drop height, or want to lower the chassis further and there is still adjustment available at the lower mount, please use the following procedure:

- 1. Support the vehicle with jack stands or a hoist at approved lifting points.
- 2. Remove the wheel.
- 3. Using the supplied spanner wrench, loosen the lower locking collar (fig. 30).

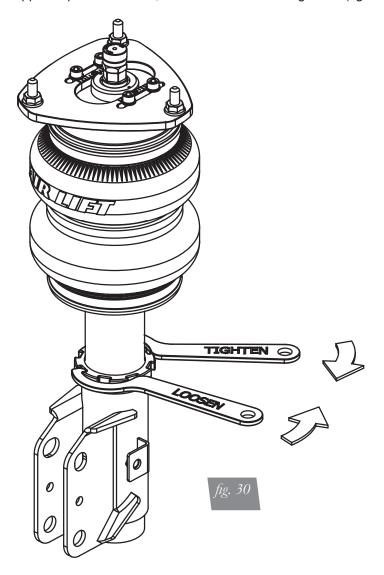

- 4. Deflate the air spring to 0 PSI on the corner you are adjusting.
- 5. Disconnect lower mount from suspension.
- 6. Spin the lower mount to the desired location.

NOTE

Not all models will have further drop height available.

- 7. Re-install lower mount to suspension and torque fasteners.
- 8. Tighten the lower locking collar to the lower mount using significant force.






WHEN ADJUSTING HEIGHT UPWARDS, MAKE SURE THAT THE DAMPER BODY ENGAGES ALL THE THREADS OF THE LOWER MOUNT (FIG. 31). WHEN ADJUSTING DOWNWARDS, MAKE SURE THERE IS ADEQUATE AIR SPRING CLEARANCE TO THE TIRE/WHEEL ASSEMBLY. CLEARANCE MUST BE CHECKED WITH SYSTEM FULLY DEFLATED AS WELL AS FULLY INFLATED TO ENSURE THAT NO RUBBING OCCURS. FAILURE TO MAINTAIN ADEQUATE CLEARANCE CAN RESULT IN AIR SPRING FAILURE AND WILL NOT BE COVERED UNDER WARRANTY.

A CAUTION

FOR STRUTS:

DO NOT ADJUST HEIGHT BY SPINNING AIR SPRING ON DAMPER! DOING SO MAY CAUSE AN AIR LEAK AND COMPROMISE THE ASSEMBLY.

FOR SHOCKS:

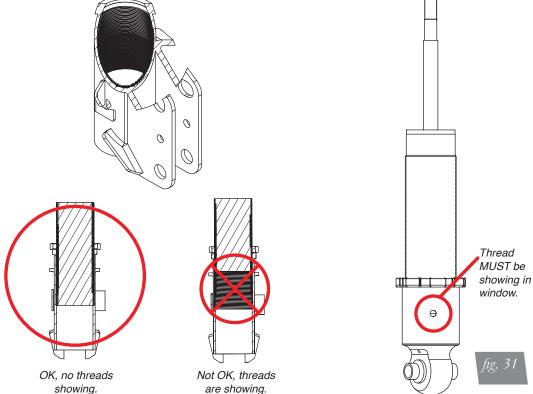

MN-934 11



Before Operating



MAKE SURE THE FRONT WHEELS ARE STRAIGHT WHEN DEFLATING AND REINFLATING AIR BAGS.

- 1. Inflate and deflate the system (do not exceed 125 PSI) to check for clearance or binding issues. With the air springs deflated, check clearances on everything so as not to pinch brake lines, vent tubes, etc. Clear lines if necessary.
- 2. Inflate the air springs to 75-90 PSI and check all connections for leaks.
- 3. Air Lift part #27669 or #27671, AutoPilot V2 Air Management System, is highly recommended for this product.
- 4. Please familiarize yourself further with this product by reading the Product Use, Maintenance and Servicing section.

	NSTALLATION CHECKLIST
	Clearance test — Inflate the air springs to 75-90 PSI and make sure there is at least $1/2$ " clearance from anything that might rub against each sleeve. Be sure to check the tire, brake drum, frame, shock absorbers and brake cables.
	Leak test before road test — Inflate the air springs to 75-90 PSI and check all connections for leaks. All leaks must be eliminated before the vehicle is road tested.
	Heat test — Be sure there is sufficient clearance from heat sources, at least 6" for air springs and air lines. If a heat shield was included in the kit, install it. If there is no heat shield, but one is required, call Air Lift customer service at (800) 248-0892.
	Fastener test — Recheck all bolts for proper torque.
	Road test — The vehicle should be road tested after the preceding tests. Inflate the springs to recommended driving pressures. Drive the vehicle 10 miles and recheck for clearance, loose fasteners and air leaks.
	Operating instructions — If professionally installed, the installer should review the operating instructions with the owner. Be sure to provide the owner with all of the paperwork that came with the kit.
Te	echnician's Signature
D	ate
F	POST-INSTALLATION CHECKLIST
	Overnight leak down test — Recheck air pressure after the vehicle has been used for 24 hours. If the pressure has dropped more than 5 PSI, then there is a leak that must be fixed. Either fix the leak yourself or return to the installer for service.
	Air pressure requirements — Regardless of load, the air pressure should always be

be fixed. Either fix the leak yourself or return to the installer for service.
Air pressure requirements — Regardless of load, the air pressure should always be adjusted to maintain adequate ride height at all times while driving.
Thirty day or 500 mile test — Recheck the air spring system after 30 days or 500 miles whichever comes first. If any part shows signs of rubbing or abrasion, the source should be identified and moved, if possible. If it is not possible to relocate the cause of the abrasion the air spring may need to be remounted. If professionally installed, the installer should be consulted. Check all fasteners for tightness



Product Use, Maintenance and Servicing

Suggested Driving Air Pressure	Maximum Air Pressure	
60-75 PSI	125 PSI	
FAILURE TO MAINTAIN ADEQUATE MINIMUM DDESCURE (OD DDESCURE		

FAILURE TO MAINTAIN ADEQUATE MINIMUM PRESSURE (OR PRESSURE PROPORTIONAL TO LOAD) WILL RESULT IN BOTTOMING OUT, OVER-EXTENSION OR RUBBING AGAINST ANOTHER COMPONENT AND WILL **VOID THE WARRANTY**.

MAINTENANCE GUIDELINES

NOTE

By following these steps, vehicle owners will obtain the longest life and best results from their air spring.

- 1. Check the air pressure before driving.
- Never inflate beyond 125 PSI.
- If you develop an air leak in the system, use a soapy water solution to check all air line connections, before deflating and removing the spring.
- 4. When increasing load, always adjust the air pressure to maintain normal ride height. Increase or decrease pressure from the system as necessary to attain normal ride height for optimal ride and handling. Remember that loads carried behind the axle (including tongue loads) require more leveling force (pressure) than those carried directly over the axle.



FOR YOUR SAFETY AND TO PREVENT DAMAGE TO YOUR VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR), AS INDICATED BY THE VEHICLE MANUFACTURER. ALTHOUGH YOUR AIR SPRINGS ARE RATED AT A MAXIMUM INFLATION PRESSURE OF 125 PSI, THE AIR PRESSURE ACTUALLY NEEDED IS DEPENDENT ON YOUR LOAD.

- 5. Always add air to the springs in small quantities, checking the pressure frequently. Sleeves require less air volume than a tire and inflate quickly.
- 6. Should it become necessary to raise the vehicle by the frame, make sure the control system is turned off before lifting.

Troubleshooting Guide

- 1. Leak test the air line connections, the threaded connection into the air spring, and all fittings in the control system.
- 2. Inspect the air lines to be sure none are pinched. Tie straps may be too tight. Loosen or replace the strap and replace leaking components.
- 3. Inspect the air line for holes and cracks. Replace as needed.
- 4. Look for a kink or fold in the air line. Reroute as needed.

If the preceding steps do not solve the problem, it is possibly caused by a failed air spring — either a factory defect or an operating problem. Please call Air Lift at (800) 248-0892 for assistance.

Frequently Asked Questions

- Q. Will installing air springs increase the weight ratings of a vehicle?
 No. Adding air springs will not change the weight ratings (GAWR, GCWR and/or GVWR) of a vehicle. Exceeding the GVWR is dangerous and voids the Air Lift warranty.
- Q. How long should air springs last?
 If the air springs are properly installed and maintained they can last indefinitely.
- Q. Will raising the vehicle on a hoist for service work damage the air springs?

 No. The vehicle can be lifted on a hoist for short-term service work such as tire rotation or oil changes. However, if the vehicle will be on the hoist for a prolonged period of time, support the axle with jack stands in order to take the tension off of the air springs.

MN-934 13



Tuning the Air Pressure

Pressure determination comes down to three things — level vehicle, ride comfort, and stability.

1. Level vehicle

If the vehicle's headlights are shining into the trees or the vehicle is leaning to one side, then it is not level. Raise the air pressure to correct either of these problems and level the vehicle.

2. Ride comfort

If the vehicle has a rough or harsh ride it may be due to either too much pressure or not enough. Try different pressures to determine the best ride comfort. See Air Lift suggested driving air pressure.

3. Stability


Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess. Tuning out these problems usually requires additional air pressure, strut damping, or both.

Checking for leaks

- 1. Inflate the air spring to 80 PSI.
- 2. Spray all connections and the inflation valves with a solution of 1/5 liquid dish soap and 4/5 water. Spot leaks easily by looking for bubbles in the soapy water.
- 3. After the test, deflate the springs to the minimum pressure required to restore the system to normal ride height.
- 4. Check the air pressure again after 24 hours. A 2-4 PSI loss after initial installation is normal. Retest for leaks if the loss is more than 5 PSI.

Fixing Leaks

- 1. If there is a problem with a swivel fitting:
 - a. Check the air line connection by deflating the spring and removing the line by pulling the collar against the fitting and pulling firmly on the air line. Trim 1" off the end of the air line. Be sure the cut is clean and square (see fig. 32). Reinsert the air line into the push-to-connect fitting.
 - b. Check the threaded connection by tightening the swivel fitting another ½ turn. If it still leaks, deflate the air spring, remove the fitting, and re-coat the threads with thread sealant. Reinstall by hand tightening as much as possible and then use a wrench for an additional two turns.
- 2. If the preceding steps have not resolved the problem, call Air Lift customer service at (800) 248-0892.

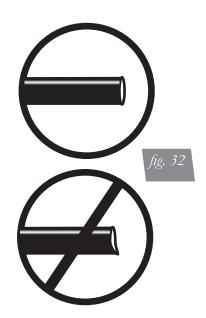



Warranty and Returns Policy

Air Lift Performance warrants its performance products for one year to the original purchaser against manufacturing defects one year from the date of purchase when used on cars and trucks as specified under normal operating conditions. The warranty does not apply to products that have been improperly applied, improperly installed, or which have not been maintained in accordance with installation instructions furnished with all products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid, to the dealer from which it was purchased or to Air Lift Performance for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Performance • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Performance reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that may vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Performance customer service at (800) 248-0892 first if:

- · Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- · Wrong parts in the kit.
- · Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- · If there is a problem with the price.

Contact Information

If you have any questions, comments or need technical assistance contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144. You may also contact customer service anytime by e-mail at techsupport@airliftperformance.com.

For inquiries by mail, our address is PO Box 80167, Lansing, MI 48908-0167. Our shipping address for returns is 2727 Snow Road, Lansing, MI 48917.

You may also contact our sales team anytime by e-mail at sales@airliftperformance.com or on the web at www.airliftperformance.com.

MN-934 **15**

Notes

Notes

MN-934 17

Need Help?

Contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144.





Kit 27666

Manual Air Management System



PERFORMANCE TO THE INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

Failure to read these instructions can result in an incorrect installation.

MN-726 • (041404) • ECR 7825

TABLE OF CONTENTS

Introduction
Important Safety Notice
Notation Explanation
Hardware List3
NPT Assembly Instructions
Helpful Tips: Air Line and Fittings
Installing the Air Management System 4
Install Components
Mounting the Switch Panel
Attaching the Air Lines
Troubleshooting Guide6
Tuning the Air Pressure7
Leak Testing and Detection
Installation Diagram 8-9
Warranty and Returns Policy
Replacement Information
Contact Information11
Electrical Schematic
Paddle Switch Mounting Bracket Template13
16380 Compressor Template



Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of the Air Management System.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information here includes a hardware list, tool list, step-by-step installation information, maintenance guidelines and troubleshooting guide.

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time. For the latest version of this manual, contact Air Lift Company at (800) 248-0892 or visit our website at www.airliftcompany.com.

IMPORTANT SAFETY NOTICE

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating: The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and passengers that the vehicle is designed to carry. Payload is GVWR minus the Base Curb Weight.

NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.



INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

NOTE

Indicates a procedure, practice or hint which is important to highlight.



Hardware List

Item	Part #	Description	Quantity	Item	Part #	Description	Quantit
Α	16380	Viair 380C Compressor	1	Electric	al		
В	11955	4 Gallon Aluminum Air Tank	1	S	24782	30/50A Relay	1
С	26228	Dual Needle Gauge	2	Т	24608	10 Gauge Red Wire	15'
D	21703	Paddle Switch	4	U	24643	16 Gauge Red Wire	20'
E	11031	Paddle Switch Mounting Bracket	1	V	24644	16 Gauge Black Wire	10'
F	20946	1/4" Airline	80'	W	24537	Quick Splice	3
G	10530	Air Line Cutter	1	Χ	24568	18 Gauge Ring Terminal	2
Н	24575	145 - 175 PSI Pressure Switch	1	Υ	24594	Blue Female Spade Terminal	9
Paddle	Switch Mo	unting Bracket Hardware		Z	24748	12 Gauge Ring Terminal 3/8" ID	1
I	17434	#8 x 3/4" Stainless Steel Screw	4	AA	24542	Fuse Tap	1
Tank M	ounting Ha	rdware		BB	24561	Mini Fuse Adapter	1
J	17188	3/8"-16 x 1.25" Grade 5 Bolt	4	CC	24649	Yellow Butt Connector	1
K	18444	3/8" Flat Washer	8	DD	24595	Yellow Female Spade Terminal	2
L	18435	3/8"-16 Nyloc Nut	4	EE	17263	1/4" x 1" Self Threading Screw	1
Tank Fi	ttings			FF	24539	Fuse Holder	1
M	21737	3/8" Pipe Plug	1	GG	24547	30A Spade Fuse	1
Ν	21738	1/4" FNPT x 3/8" MNPT Bushing	1	HH	17132	1/2" Self Threading Screw	2
О	21779	1/4" NPT x 1/4" Tube Elbow	2	Gauge and Paddle Switch Fittings			
Р	21610	1/8" FNPT x 1/4"MNPT Bushing	1	II .	21838	1/4" Union Tee	4
Q	21633	Inflation Valve	1	JJ	21842	1/4" Y Tee	3
R	23586	Thread Sealant	1				

STOP!

Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

NPT ASSEMBLY INSTRUCTIONS

- 1. Inspect the port and fitting ensuring both are free of contaminants and excessive burrs and nicks.
- 2. Apply a stripe of liquid pipe sealant around the male threads leaving the first two threads uncovered.
- 3. Screw finger tight into the port.
- 4. Wrench tighten the fitting to the correct turns past finger tight position (see table 1).



NEVER BACK OFF AN INSTALLED PIPE FITTING TO ACHIEVE PROPER ALIGNMENT. LOOSENING INSTALLED PIPE FITTINGS WILL CORRUPT THE SEAL AND CONTRIBUTE TO LEAKAGE AND FAILURE.

Torque Specifications				
Fitting Size	Turns Past Finger Tight	Torque lb/ft		
1/8" NPT	1.5 - 3.0	12		
1/4" NPT	1.5 - 3.0	25		
3/8" NPT	1.5 - 3.0	40		
1/2" NPT	1.5 - 3.0	54		
3/4" NPT	1.5 - 3.0	78		
1" NPT	1 - 2.5	112		
1 1/4" NPT	1 - 2.5	154		
1 1/2" NPT	1 - 2.5	211		
2" NPT	1 - 2.5	300		

Table 1



HELPFUL TIPS: AIR LINE AND FITTINGS

- 1. Minimum hose bend radius
 - 1/4" hose = 1" hose bend radius.
- 2. Hose to fitting
 - No side loading on fitting from hose.
 - Hose straight for 1" before bending.
- 3. Hose cutting
 - Cut hose perpendicular to hose length.
 - Inspect hose for scratches that run lengthwise on hose prior to insertion.
 - Use proper hose cutter, cigar cutter, or razor on flat surface.
- DOT/SAEJ844 air brake hose data
 - Maximum working pressure of 175 PSI.
 - Not to be used for frame (body) to un-sprung mass connection, use a braided leader hose for this moving connection.

	Compressor Tank Pressure					
	Viair	Air Lift P/N	Max. Tank Pressure			
	380C	16380	175			
	400C	16400	150			
	444C	16444	175			
ĺ	450C	16450	150			

Table 2

Installing the Air Management System

INSTALL COMPONENTS

NOTE

For a complete schematic, please see fig. 1. (pages 8 – 9)

Layout

- 1. Plan component location first.
- 2. Prior to mounting components, check to make sure:
 - the compressor leader hose will reach the tank.
 - the plumbing will route cleanly through the vehicle.

NOTE

Be sure to install all components as far as possible from any heat sources. Plan and prepare wiring and plumbing routing thru the vehicle. Eliminate all sharp edges that could chafe. Use grommets when passing through compartment walls.

Prepare and install the compressor

- Prepare the compressor intake. If inside the vehicle, attach filter to port on end of compressor (fig. 1). If the compressor is located outside the vehicle, snorkel inlet filter to a dry location inside vehicle using components supplied with the compressor.
- 2. Center punch and drill four holes using the template on page 15.
- 3. Attach using the hardware supplied with the compressor.

NOTE

Air compressors ingest moisture and will deposit water in the tank. Tanks must be regularly purged to eliminate the possibility of water freezing inside the system or causing corrosion. Be sure to provide easy access to drain/fill valve (preferably outside the vehicle). The system does not include moisture separators or water traps, and does require periodic tank moisture drain. If using an engine driven compressor, proper oil and water filtration must be added as these compressors will contaminate the air suspension system. Water traps are available and sold separately through Air Lift Performance, part numbers: 21011 (1/4"), 21012 (3/8"), 21013 (1/2").



Tank pre-assembly (see fig. 1)

- Determine tank location and orientation prior to installing fittings.
- 2. Apply thread sealant as necessary to all fittings.
- 3. Install the drain/fill PTC fitting in the lower most tank threaded port.
- 4. Choose a tank threaded port for the compressor fitting.
- 5. Choose the highest tank threaded port for air line supply.
- 6. Plug any remaining tank ports with hex plugs.

Tank install (see fig. 1)

- 1. Using the tank feet as a template, drill holes for hardware assembly.
- 2. Attach the tank using the supplied hardware.
- 3. Cut an appropriate length of hose from the manifold port T, to the PTC fitting on the tank.
- 4. Route the drain/fill air line with a schrader valve (preferably outside the vehicle).

NOTE

When cutting plastic air line, only use a standard hose cutter like (Air Lift part number 10530) or razorblade. Cut all hose ends square and as smoothly as possible. See hose cutting tips on page 4.

MOUNTING THE SWITCH PANEL

Refer to the switch panel template on page 13.

- 1. Find a location to mount the paddle switch mounting bracket (E).
- 2. Snap all four paddle switches (D) into the paddle switch mounting bracket (E) so the DEL is toward the top.

NOTE

You may select different locations for the paddle switches. The paddle switches do not need to be used with the supplied paddle switch mounting bracket.

- 3. Cut six pieces of air line (F) the same length (approximately 3"-6").
- 4. Push four of these pieces onto the "SUP" port of the switch. Attach two Y fittings (JJ) to the air lines.
- 5. Push the other two pieces of line into the Y fittings (JJ).
- 6. Attach the last Y fitting (JJ) to the air lines.
- 7. Mount the paddle switch mounting bracket (E) with four screws (I).

ATTACHING THE AIR LINES



WHEN CUTTING OR TRIMMING THE AIR LINE, USE AN AIR LINE CUTTER (G), A RAZOR BLADE OR A SHARP KNIFE. A CLEAN, SQUARE CUT WILL ENSURE AGAINST LEAKS. DO NOT USE WIRE CUTTERS OR SCISSORS TO CUT THE AIR LINE. THESE TOOLS MAY FLATTEN OR CRIMP THE AIR LINE, CAUSING IT TO LEAK.

- 1. Run a length of air line (F) from the air fitting on the compressor to the end of the switch cluster.
- 2. Run a length of air line from the remaining air fittings on the switch to its respective air spring.
- 3. Repeat step 2 for the remaining air fittings and air springs.
- 4. Use a tee and connect into each one of the air spring lines to connect to it's respective gauge port.
- 5. Test and make sure that the switches operate the appropriate air springs.

MN-726 5



Troubleshooting Guide

For further technical assistance please contact our customer service department by calling (800) 248-0892, Monday through Friday. For calls from outside the USA or Canada, our local number is (517) 322-2144.

PROBLEM	CAUSE	SOLUTION
Compressor doesn't run	There is a blown fuse or relay, bad ground, or poor electrical connections.	Replace the fuse, check the ground wire, or check the compressor connector
Compressor runs all the time.	The compressor relay is defective or there is a leak.	Replace the relay or locate the leak and repair.
Air spring or tank leak.	Fitting seal or air line is compromised.	Check to make sure air lines are seated in connectors. Inspect fittings with soapy water. Trim hose or reseal fitting.
Compressors runs all the time but doesn't fill the tank.	Compressor in-line check valve fitting has been overtorqued.	Loosen fitting and check again. Replace if needed.



Tuning the Air Pressure

Pressure determination comes down to three things — level vehicle, ride comfort, and stability.

1. Level vehicle

If the vehicle's headlights are shining into the trees or the vehicle is leaning to one side, then it is not level. Raise the air pressure to correct either of these problems and level the vehicle.

2. Ride comfort

If the vehicle has a rough or harsh ride it may be due to either too much pressure or not enough. Try different pressures to determine the best ride comfort.

3. Stability

Stability translates into safety and should be the priority, meaning the driver may need to sacrifice a perfectly level and comfortable ride. Stability issues include roll control, bounce, dive during braking and sponginess. Tuning out these problems usually requires an increase in pressure.

Leak Testing and Detection

Leak detection


- 1. A leak can be defined as a loss of pressure of more than 5 psi over an 8 hour period. Be aware that ambient temperature change has an effect on pressure that may seem like a leak. For example: a change of 10° Fahrenheit up or down from your baseline will have an approximate gain or loss of indicated pressure of 2 psi. If a leak is suspected after including any temperature change, then proceed to #2.
- 2. Spray soapy water (1/5 Dawn brand dish soap to 4/5 water) on suspect fittings and hose connections and look for any bubbling caused by air leakage.
- 3. Fix leaking connection (review pages 3 and 4 for help on NPT fittings and air line connections).
- Wipe down sprayed connections with rag to remove any residual soapy water.

NOTE


Dawn brand dish soap will not corrode the metals (aluminum, brass, steel) with which it comes into contact.



Installation Diagram

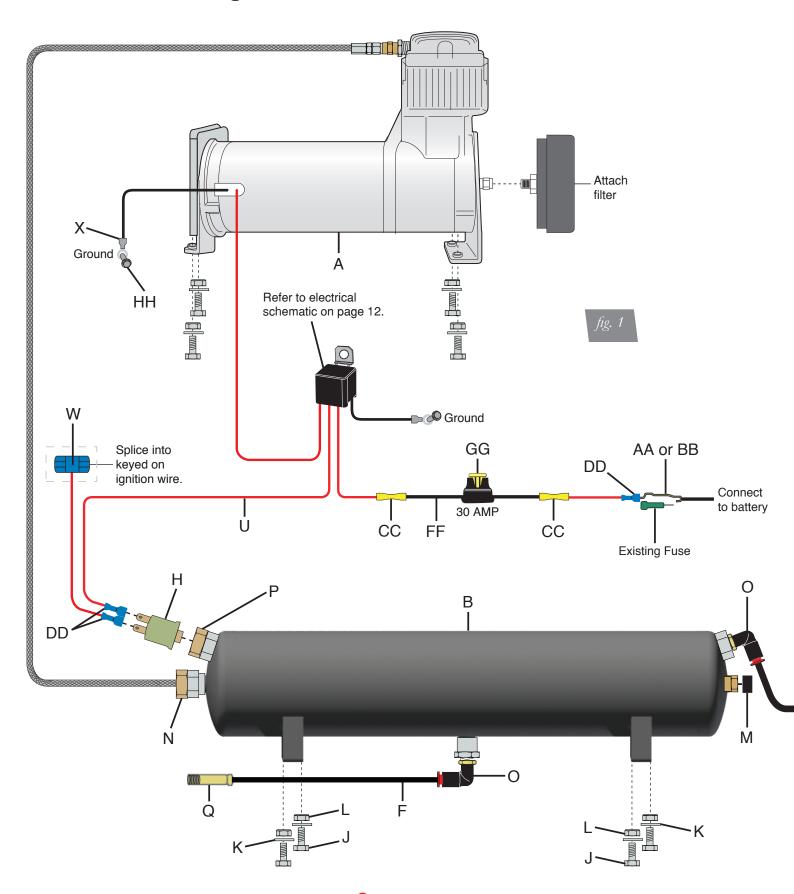




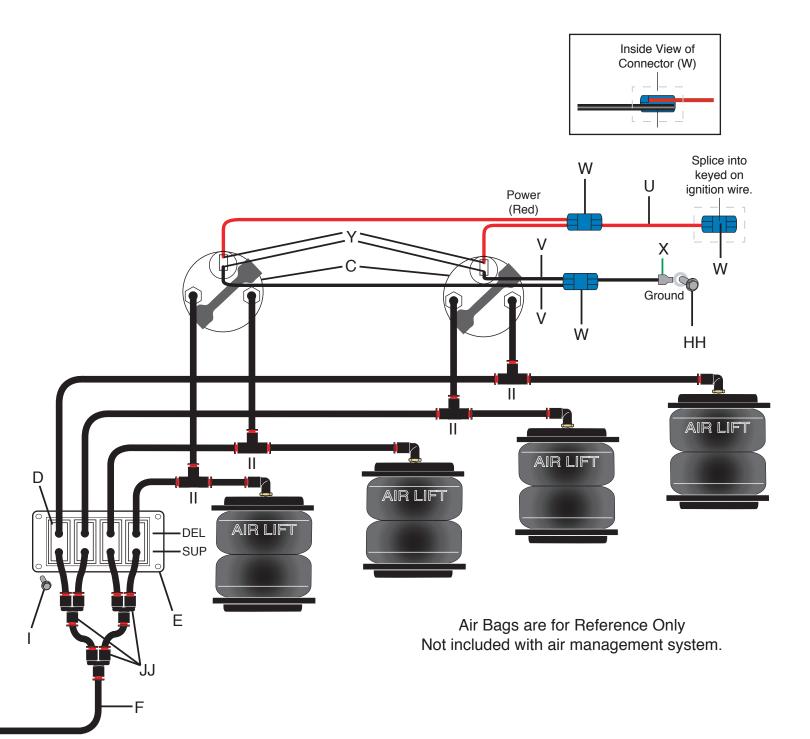

NOTE: Air Lift recommends using a hose cutting tool to ensure a proper cut.

If a hose connection has been disconnected the hose must be trimmed 1/2" back to provide for a leak free seal.

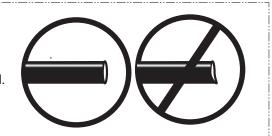



Warranty and Returns Policy

Air Lift Company warrants its products, for the time periods listed below, to the original retail purchaser against manufacturing defects when used on catalog-listed applications on cars, vans, light trucks and motorhomes under normal operating conditions for as long as Air Lift manufactures the product. The warranty does not apply to products that have been improperly applied, improperly installed, used in racing or off-road applications, used for commercial purposes, or which have not been maintained in accordance with installation instructions furnished with all products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid, to the dealer from which it was purchased or to Air Lift Company for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift at (800) 248-0892 in the U.S. and Canada (elsewhere, (517) 322-2144) for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that vary from state-to-state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. (Dated proof of purchase required.)

Air Lift 1000™Lifetime Limited	LoadController/Dual™ 2 Year Limited
RideControl™Lifetime Limited	Load Controller™ (I)2 Year Limited
LoadLifter 5000™*Lifetime Limited	Load Controller™ (II)2 Year Limited
SlamAir™Lifetime Limited	SmartAir™2 Year Limited
AirCell™Lifetime Limited	Wireless AIR™2 Year Limited
Air Lift Performance™**1 Year Limited	WirelessONE™2 Year Limited
LoadController/Single™ 2 Year Limited	Other Accessories2 Year Limited

*formerly SuperDuty

**formerly LifeStyle & Performance and Easystreet



Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

Contact Air Lift Company customer service at (800) 248-0892 first if:

- Parts are missing from the kit.
- Need technical assistance on installation or operation.
- · Broken or defective parts in the kit.
- · Wrong parts in the kit.
- · Have a warranty claim or question.

Contact the retailer where the kit was purchased:

- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- · If there is a problem with the price.

Contact Information


If you have any questions, comments or need technical assistance contact our customer service department by calling (800) 248-0892, Monday through Friday. For calls from outside the USA or Canada, our local number is (517) 322-2144.

For inquiries by mail, our address is PO Box 80167, Lansing, MI 48908-0167. Our shipping address for returns is 2727 Snow Road, Lansing, MI 48917.

You may also contact us anytime by e-mail at sales@airliftcompany.com or on the web at www.airliftcompany.com.




Electrical Schematic

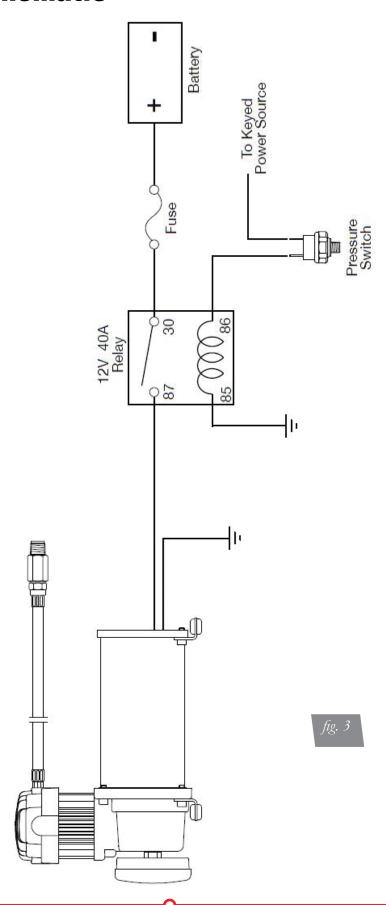



Paddle Switch Mounting Bracket Template

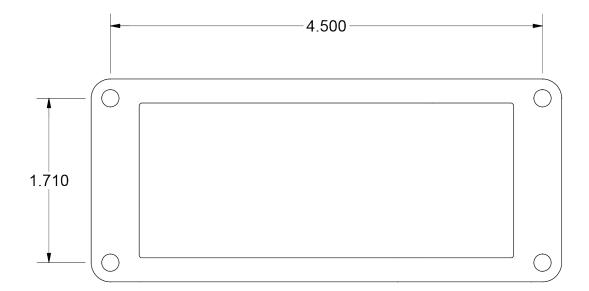


MN-726 13





16380 Compressor Template

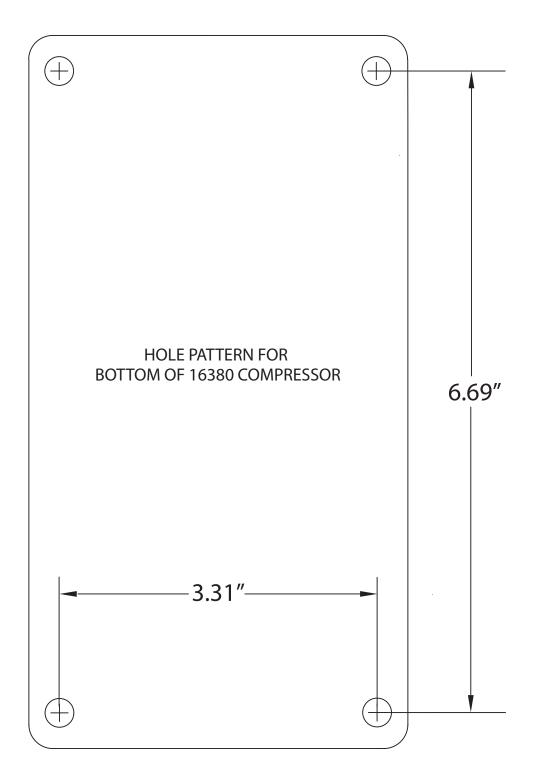

Need Help?

Contact our customer service department by calling (800) 248-0892. For calls from outside the USA or Canada, our local number is (517) 322-2144.

