

# LifeSTYLE

by AIR LIFT®

## Front Kit No. 75532

1992-2001 Honda Prelude



*Cover  
illustration  
may not depict  
actual kit.*



## INSTALLATION GUIDE

For maximum effectiveness and safety, please read these instructions completely before proceeding with installation.

*Failure to read these instructions can result in an incorrect installation.*





# TABLE OF CONTENTS



<b>Introduction</b> .....	<b>2</b>
Important Safety Notice .....	2
Notation Explanation .....	2
<b>Installing the LifeSTYLE Kit</b> .....	<b>3</b>
Hardware List .....	3
Preparing the Vehicle .....	3
Strut Removal .....	3
Assembling the Strut .....	4
Spindle Casting Flash .....	5
Trimming the Upper A-Arm .....	5
Installing Strut Assembly .....	6
Before Operating .....	7
<b>Maintenance and Servicing</b> .....	<b>7</b>
Maintaining and Operating .....	7
<b>Warranty and Return Policy</b> .....	<b>7</b>
<b>Replacement Information</b> .....	<b>8</b>
<b>Contact Information</b> .....	<b>8</b>

# Introduction

The purpose of this publication is to assist with the installation, maintenance and troubleshooting of the EasyStreet kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information here includes a hardware list, step-by-step installation information, maintenance tips, and safety information.

Air Lift Company reserves the right to make changes and improvements to its products and publications at any time. Contact Air Lift Company at (800) 248-0892 for the latest version of this manual.

## IMPORTANT SAFETY NOTICE

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

**Gross Vehicle Weight Rating:** The maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

**Payload:** The combined, maximum allowable weight of cargo and passengers that the truck is designed to carry. Payload is GVWR minus the Base Curb Weight.

## NOTATION EXPLANATION

Hazard notations appear in various locations in this publication. Information which is highlighted by one of these notations must be observed to help minimize risk of personal injury or possible improper installation which may render the vehicle unsafe. Notes are used to help emphasize areas of procedural importance and provide helpful suggestions. The following definitions explain the use of these notations as they appear throughout this guide.

** DANGER**

INDICATES IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

** WARNING**

INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.

** CAUTION**

INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN DAMAGE TO THE MACHINE OR MINOR PERSONAL INJURY.

**NOTE**

*Indicates a procedure, practice or hint which is important to highlight.*

## HARDWARE LIST

Item	Part #	Description .....	Qty
A	35066	Strut assembly .....	2
B	09333	Rubber washer.....	2
C	21263	1/2" Elbow fitting .....	2
D	18500	Nyloc nut .....	2
E	18468	3/8" Flat washer .....	2



Missing or damaged parts? Call Air Lift customer service at (800) 248-0892 for a replacement part.

# Installing the LifeSTYLE Kit

**IMPORTANT:** Always keep safety in mind when working on your vehicle. Completely read these instructions before installing the kit.

## PREPARING THE VEHICLE

1. Begin the installation by elevating the car. Secure the frame with jack stands.
2. Remove the front wheels.


## STRUT REMOVAL

1. Remove the three nuts on the top of the strut and retain for later use. These are located on the inside of the engine compartment above the strut pocket (fig. 1).
2. Remove the anti-rotation bolt that holds the lower strut to the fork and retain for later use.
3. Move the fork out of the way.
4. Remove the strut assembly and upper strut mount from the vehicle.


### NOTE

*The upper strut mount and the anti-rotation bolt will be used for reassembly.*

5. Remove the O.E.M. rubber bumper from the O.E.M. upper strut mount and discard (fig. 2).

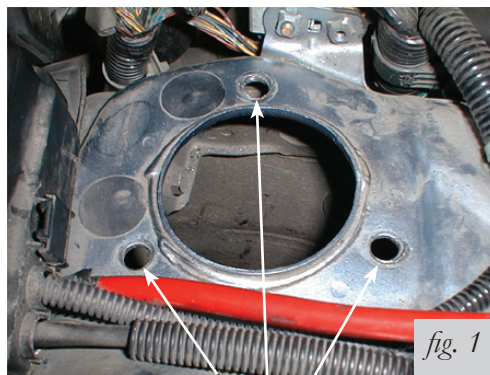


Remove nuts and save for later use.

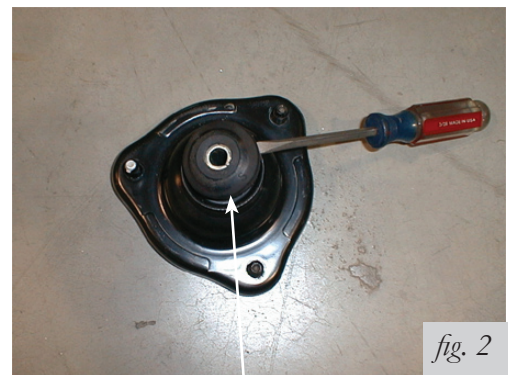

Remove the rubber bumper and discard.

## ASSEMBLING THE STRUT

1. Mark a notch on a side of the upper strut mount using the grooves in the top of the strut mount as a guide (fig. 3).
2. Cut out a notch large enough to clear the air fitting when the strut is in place (fig. 4).


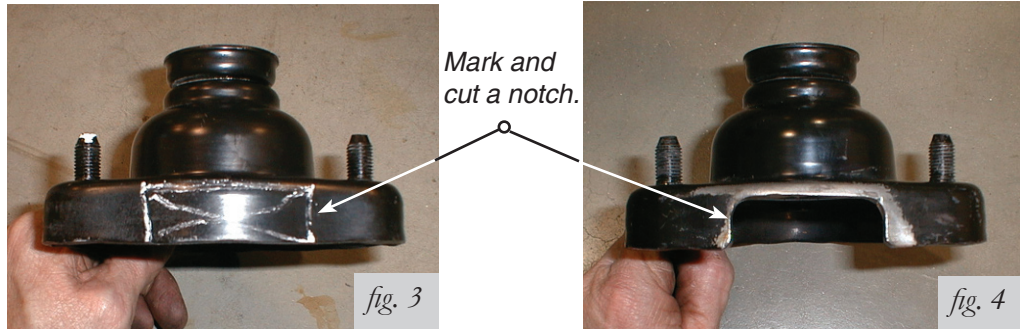


3. Pull up the shaft on the strut to ensure that the o-ring in the end cap is seated (fig. 5). The shaft will move approximately  $\frac{1}{4}$ ".
4. Insert the supplied  $\frac{1}{2}$ " 90° air fitting (C) into the strut. Tighten the fitting finger-tight plus  $1\frac{1}{2}$  turns.

### NOTE

*Be careful to tighten on the metal hex nut only. The fitting needs to be turned so that a base of the hex nut is parallel to the end cap (fig. 6).*

5. Place a supplied rubber washer (B) onto the air assembly at the top of the strut (fig. 7).
6. Put the modified upper strut mount on top of the sleeve assembly. Fasten using a supplied flat washer (E) and nyloc nut (D) (fig. 7).
7. Tighten only finger-tight at this time.

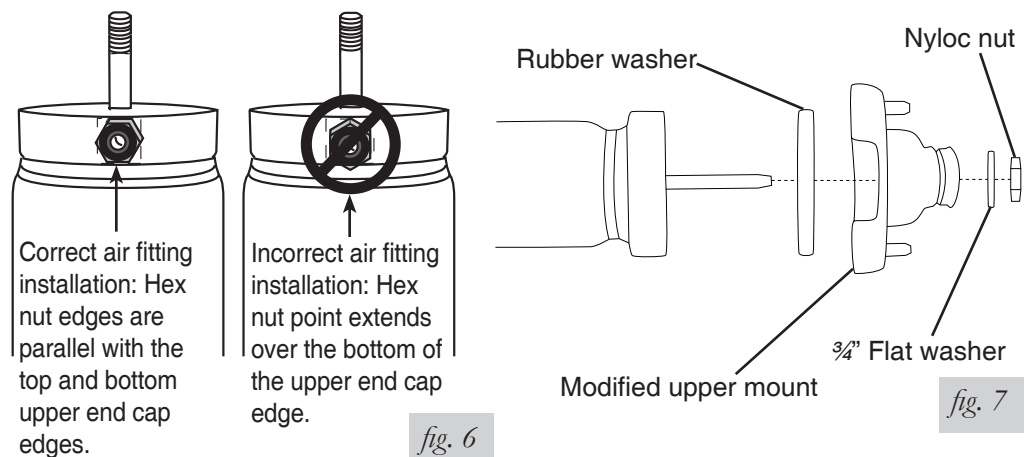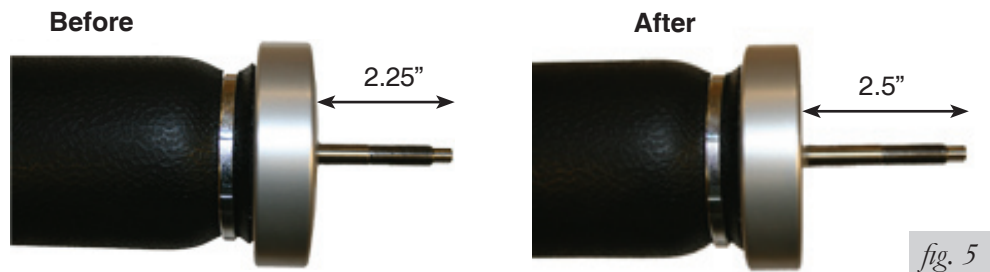

## SPINDLE CASTING FLASH

### CAUTION

THIS STEP IS CRITICAL TO THE LIFE AND PERFORMANCE OF YOUR AIR BAGS.

1. It will be necessary to grind the inside of the flashing off the spindle arm that attaches to the upper control arm (fig. 8).

### CAUTION

FAILURE TO GRIND THE FLASHING MAY CAUSE THE AIR BAG TO RUB AGAINST THE SPINDLE ARM FLASHING AND RUPTURE. THIS WILL VOID THE AIR BAG WARRANTY.

### NOTE

*Make sure the face is smooth and clear of burrs.*



fig. 8

## TRIMMING THE UPPER A-ARM

### NOTE

*It will be necessary to trim the flange off of the upper A-arm in order to make clearance for the flex member (fig. 9).*

1. Remove the control arm mounting hardware and replace with bolts (D), flat washers (E), and nyloc nuts (C) being sure to insert them with the bolt heads facing the inside of the control mount in order to provide adequate clearance for the air strut (fig. 9).
2. The inside flange on the upper control arm can be trimmed by using a die grinder with a cut-off wheel or grinding bit. Be sure all sharp edges are removed, and paint the exposed area when complete (fig. 9).
3. The top bar for the upper control arm will also need to be trimmed. Grind 1/8" off of a 3" area (fig. 9).

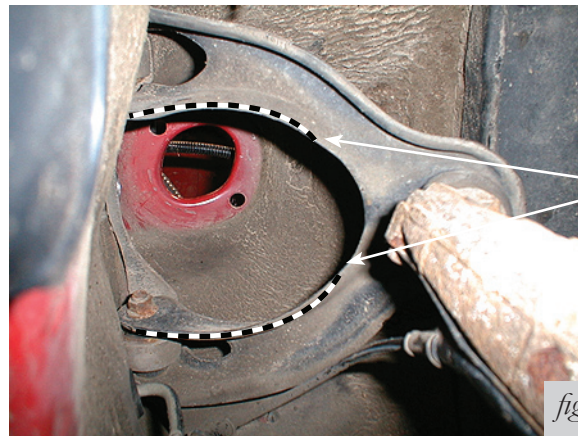


fig. 9



## INSTALLING THE STRUT ASSEMBLY


1. Using the template at the end of the manual, line up the three holes in the template with the three holes in the upper strut tower.
2. Make a mark in the engine compartment where the fourth hole will need to be drilled.
3. Remove the template and drill a hole in the upper strut tower large enough to accommodate the air fitting from the top of the strut (fig. 10).

### NOTE

*Be sure that you have adequate clearance before drilling.*

*The same template will be used for both sides of the vehicle.*

*A silicone seal or rubber grommet is recommended to protect the air line where it passes through the strut tower.*

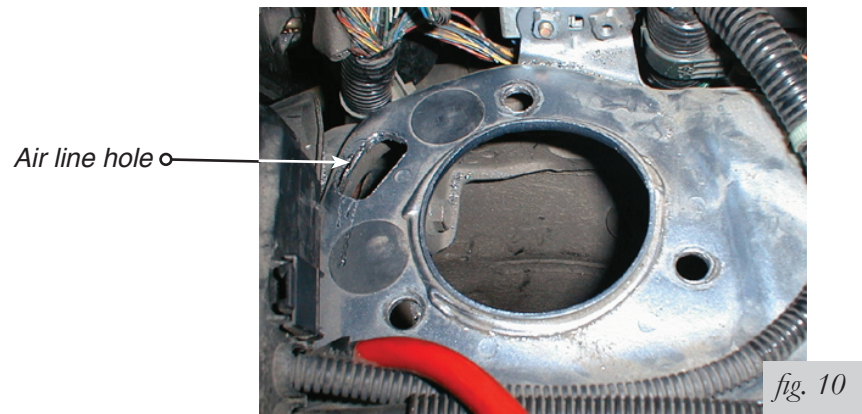

4. Place the upper strut mount back into the compartment.

### NOTE

*Rotate the strut assembly so that the air fitting is through the center previously drilled hole.*

5. Fasten the strut using the three previously removed nuts (fig. 11).
6. Tighten the nut at the top of the upper strut mount at this time.
7. Slide the lower end of the strut into the strut fork.
8. Replace the previously removed lower strut mounting bolt (fig. 12). Leave loose at this time.
9. Tighten the lower strut mounting bolt.
10. Securely tighten the three nyloc nuts in the engine compartment.
11. Install the air line at this time (fig. 11).



*Install the air line and previously removed nuts.*



*Lower strut mounting bolt.*



## BEFORE OPERATING

1. Inflate and deflate system (do not exceed 150 p.s.i.) to check for clearance or binding issues. With air springs deflated, check clearances on everything so as not to pinch brake lines, vent tubes, etc. Clear lines if necessary.
2. Tighten and visually inspect all hardware after 100 miles.
3. The struts for the vehicle come with a nine-position damping dial (shown below) for added adjustability. To start, we recommend setting the dial at the third position for the most versatility.
4. Air Lift part #27741 is highly recommended for this product.



## Maintenance and Servicing

Minimum Air Pressure	Maximum Air Pressure
10 p.s.i.	150 p.s.i.
FAILURE TO MAINTAIN CORRECT MINIMUM PRESSURE (OR PRESSURE PROPORTIONAL TO LOAD), BOTTOMING OUT, OVER-EXTENSION, OR RUBBING AGAINST ANOTHER COMPONENT WILL VOID THE WARRANTY.	

1. Always maintain ride height. Increase or decrease pressure from the system as necessary to attain ride height for optimal ride and handling. Never inflate beyond 150 p.s.i.
2. Driving at low p.s.i can cause the strut to bottom out. Repeated bottoming out can cause the strut to fail. This failure is not covered under warranty.

**CAUTION**

FOR YOUR SAFETY AND TO PREVENT DAMAGE TO YOUR VEHICLE, DO NOT EXCEED MAXIMUM GROSS VEHICLE WEIGHT RATING (GVWR), AS INDICATED BY THE VEHICLE MANUFACTURER. CHECK YOUR VEHICLE'S OWNERS MANUAL AND DO NOT EXCEED THE MAXIMUM LOAD LISTED FOR YOUR VEHICLE.

3. Should it become necessary to raise the vehicle by the frame or do any service work, make sure the system is at minimum pressure (10 p.s.i.) for safety and to reduce the tension on the suspension and brake components.

## Warranty and Returns Policy

Air Lift Company warrants its products for the time periods listed below, to the original retail purchaser against manufacturing defects used on catalog listed applications on cars, vans, light trucks and motorhomes under normal operating conditions for as long as Air Lift manufactures the product. The warranty does not apply to products that have been improperly applied, installed, used in racing applications or not maintained in accordance with installation instructions furnished with all Air Lift products. The consumer will be responsible for removing (labor charges) the defective product from the vehicle and returning it, transportation costs prepaid to the dealer from which it was purchased or to Air Lift Company for verification.

Air Lift will repair or replace, at its option, defective products or components. A minimum \$10.00 shipping and handling charge will apply to all warranty claims. Before returning any defective product, you must call Air Lift (800) 248-0892 U.S. and Canada for a Returned Materials Authorization (RMA) number. Returns to Air Lift can be sent to: Air Lift Company • 2727 Snow Road • Lansing, MI • 48917.

Product failures resulting from abnormal use or misuse are excluded from this warranty. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. The consumer is responsible for installation/reinstallation (labor charges) of the product. Air Lift Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

This warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Some states do not allow limitations on how long an implied warranty lasts or allow the exclusion or limitation of incidental or consequential damages. The above limitation or exclusion may not apply to you. There are no warranties, expressed or implied including any implied warranties of merchantability and fitness, which extend beyond this warranty period. There are no warranties that extend beyond the description on the face hereof. Seller disclaims the implied warranty of merchantability. *(Dated proof of purchase required.)*

<b>Air Lift 1000</b> .....	<b>Lifetime Limited</b>	<b>Load Controller (I)</b> .....	<b>2 Year Limited</b>
<b>RideControl</b> .....	<b>Lifetime Limited</b>	<b>Load Controller (II)</b> .....	<b>2 Year Limited</b>
<b>SlamAir</b> .....	<b>Lifetime Limited</b>	<b>SmartAir</b> .....	<b>2 Year Limited</b>
<b>LoadLifter 5000*</b> .....	<b>Lifetime Limited</b>	<b>Wireless AIR</b> .....	<b>2 Year Limited</b>
<b>Lifestyle**</b> .....	<b>1 Year Limited</b>	<b>Other Accessories</b> .....	<b>2 Year Limited</b>

*\*formerly SuperDuty  
\*\*formerly EasyStreet*

## Replacement Information

If you need replacement parts, contact the local dealer or call Air Lift customer service at (800) 248-0892. Most parts are immediately available and can be shipped the same day.

**Contact Air Lift Company customer service at (800) 248-0892 first if:**

- Parts are missing from the kit.
- Need technical assistance on installation or operation.
- Broken or defective parts in the kit.
- Wrong parts in the kit.
- Have a warranty claim or question.

**Contact the retailer where the kit was purchased:**


- If it is necessary to return or exchange the kit for any reason.
- If there is a problem with shipping if shipped from the retailer.
- If there is a problem with the price.

## Contact Information

If you have any questions, comments or need technical assistance contact our customer service department by calling (800) 248-0892, Monday through Friday, 8 a.m. to 7 p.m. Eastern Time. For calls from outside the USA or Canada, our local number is (517) 322-2144.

For inquiries by mail, our address is PO Box 80167, Lansing, MI 48908-0167. Our shipping address for returns is 2727 Snow Road, Lansing, MI 48917.

You may also contact us anytime by e-mail at [sales@airliftcompany.com](mailto:sales@airliftcompany.com) or on the web at [www.airliftcompany.com](http://www.airliftcompany.com).

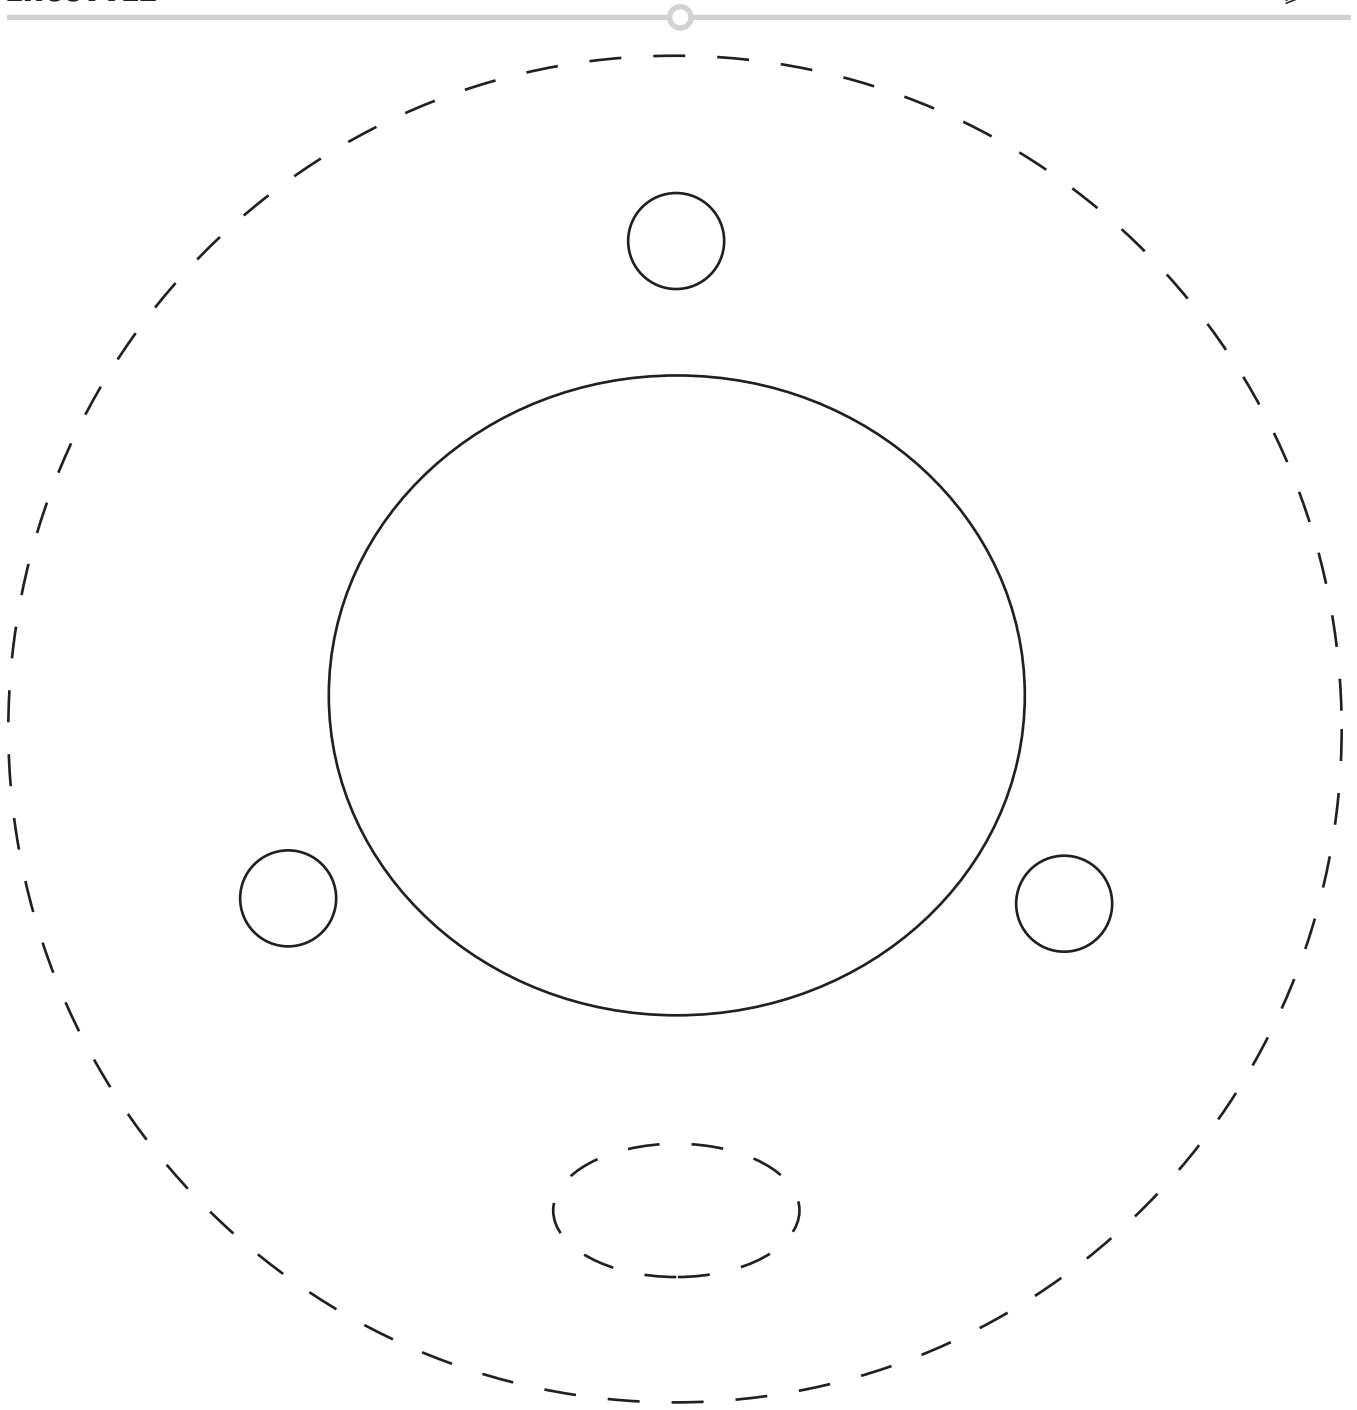

**Trim the outer edge of the template as necessary. Flip the template over for use on the remaining side of the vehicle.**

## Need Help?

Contact our customer service department by calling (800) 248-0892 Monday through Friday, 8 a.m. to 7 p.m. Eastern Time. For calls from outside the USA or Canada, our local number is (517) 322-2144.



*Thank you for purchasing Air Lift products — the professional installer's choice!*

Air Lift Company • 2727 Snow Road • Lansing, MI 48917 or PO Box 80167 • Lansing, MI 48908-0167  
Toll Free (800) 248-0892 • Local (517) 322-2144 • Fax (517) 322-0240 • [www.airliftcompany.com](http://www.airliftcompany.com)

Printed in  
the USA