

300-562 INSTALLATION INSTRUCTIONS 93-97 Dodge Intrepid 3.5L FI

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Contact AIRAID @ (800) 498-6951 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact AIRAID.

Thank you for selecting AIRAID.



<u>Parts List</u>

(2) Power Plates

(4) Gaskets
(2) 3/4 Linkage Plate

(2) 6mm x 12mm Flat Head Screw

(4) 8mm x 70mm Bolts
(4) 8mm Lock Washers

<u>Tools List</u>

13mm Socket 4mm Hex Key Standard Screwdriver


Installation Instructions. Read Me!

1. DISCONNECT NEGATIVE (-) BATTERY CABLE.

- 2. Remove throttle body air intake system
- **3.** Remove throttle linkage bracket and save bolts.
- **4.** Remove (4) throttle body studs.
- 5. Install first power plate using (2) gaskets, 8mm bolts, and 8mm washers. (Ref. "A")
- 6. Install (2) linkage plates using (2) 6mm flat head screws. (Ref. "D")
- 7. Repeat previous steps for installation of spacer on second throttle body.
- 8. Install linkage bracket using saved 6mm bolts.
- **9.** <u>Inspect & Test the throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables require adjustment. Please refer to your vehicles service manual for proper adjusting.</u>
- 10. Reinstall air intake system. Refer to Step 2
- 11. Reconnect battery cable. Enjoy!

Ref. "A"- (2) Power Plates

The sound of power...The "whistle" means its working!

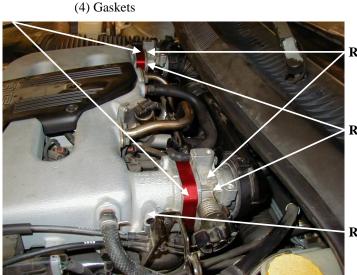

Ref. "B"- (2) Throttle Bodies

Ref. "D"- (4) 8mm x 70mm Bolts (4) 8mm Lock Washers

Ref. "C"- (2) Linkage Plates (2) 6mm x 12mm Flat Head Screws

AIRAID Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 Airaidinfo@airaid.com www.airaid.com