



A BBK Company

## Firewall Clutch Cable Adjuster

### INSTALLATION INSTRUCTIONS

- Step 1** Working from under the vehicle, remove clutch cable from the clutch fork.
- Step 2** Working from under the dashboard, remove the clutch cable from the quadrant assembly.
- Step 3** Working from under the hood, remove the sheet-metal screw attaching the clutch cable housing to the firewall. Once removed, simply pull the housing and exposed cable from the opening in the firewall.
- Step 4** Remove the large, black rubber isolator from the clutch cable housing end where it was attached to the firewall, then slide the knurled portion of the adjuster over the cable, onto the opening in the firewall.
- Step 5** Make sure the adjuster body is threaded completely onto the knurled portion of the adjuster, then insert the complete assembly into the firewall. Line up the screw hole to the notch and reinstall screw.
- Step 6** Reattach the cable to the quadrant assembly first, then to the clutch fork. To adjust the cable, simply twist the knurled adjuster either cw or ccw to loosen or tighten cable.

