

# HONDA RIDGELINE BEDRUG® MAT INSTALLATION INSTRUCTIONS

## WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!


- 1. Read all instructions before installing the BedRug Mat. THE TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENERS TO ACHIEVE MAXIMUM ADHESION. NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.
- 2. Apply the hook fasteners to the BedRug Mat before putting into the truck bed. Do NOT remove the protective liner on the back of the hook fasteners at this time.
- 3. Apply the hook fasteners to the BedRug Mat per Illustration 1 on page 2.
- 4. Lay the front section of the floor into the truck bed. Ensure that it is positioned up against the front of the truck bed where the rear edge of the floor does not interfere with the trunk lid.

Clean the areas where the hook fasteners will attach to the truck bed. Clean the areas with alcohol first, then apply the 3M 4298 adhesive promoter and let dry before adhering hook fasteners.

Note: Clean, apply promoter and adhere each hook fastener before moving to the next. Do not clean and apply adhesive promoter to multiple areas before adhering hook fasteners because these surfaces may become contaminated where the adhesive will not adhere permanently.

- 5. Attach BedRug Mat components in the following sequence:
- a. Locate and attach the inner hook fasteners with the red liner. Slide the cargo hooks through the slits in the front corners of the floor. Attach the rear edge of the floor last. Be sure the rear edge of the front floor section does not interfere with the trunk lid when the trunk lid is opened.
- b. Attach rear floor section to trunk lid. Attach the inner hook fasteners with the red liner first then the front and rear edges. Ensure that the front edge does not interfere with the front section of the BedRug Mat or the operation of the trunk lid.

### **HOOK FASTENER LOCATIONS**

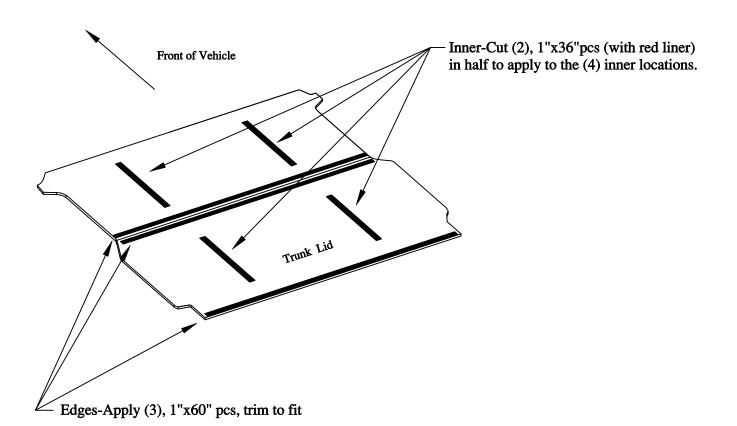

(Illustration 1)

BMH05RBSINST Rev. 1 8/5/2011 Page 2 of 3

## BEDRUG® CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

#### Cleaning your BedRug is easy:

- 1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
- 2. Although most acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
- 3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call BedRug Inc. customer service at 800-462-8435.

Retain this cleaning information with your vehicle owner's manual for future reference.

### BedRug Inc.

#### LIMITED WARRANTY

BedRug Inc. warrants BedRug<sup>®</sup>, BedTred<sup>TM</sup>, VanRug<sup>TM</sup>, and VanTred<sup>TM</sup>, for pickup trucks and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact BedRug Inc. Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

Retain this warranty information with your vehicle owner's manual for future reference. FOR WARRANTY SERVICE CALL 800-462-8435

BMH05RBSINST Rev. 1 8/5/2011 Page 3 of 3