

IMPORTANT

IMPORTANT; For proper operation, you MUST use the extended release bearing included with this clutch set. Please remove the factory release bearing from the hydraulic slave cylinder. After removing the factory release bearing, slide the extended Centerforce® release bearing on to the hydraulic slave cylinder as shown. The bearing should seat fully onto the hydraulic slave and lock in place.

Should you have questions or need further information, please call our technical service department at (928) 771-8422 or email us from www.centerforce.com

