56194 TOYOTA COROLLA

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

IDEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filetée.

11/27/2013

English

- 1. Access the vehicle's wiring harness connectors at positions P3 and P4 as shown in the Wiring Location Guide.
- 2. Locate the vehicle's battery and disconnect the negative battery terminal.
- 3. Open the trunk. Remove all trunk floor covers (A). Remove the two plastic push fasteners on each side of the rear scuff panel (B). Remove the rear scuff panel by pulling out on the bottom and then up (C). On both sides of the trunk remove the plastic push fasteners holding the felt trunk liner in place (D).
- 4. On the driver's side pull back on the felt trunk liner to locate the vehicle's taillight wiring harness connectors (E). The connectors will be similar to those on the T-Connector harness. Separate the two connectors from the taillight housing taking care not to damage the locking tabs. Insert the T-Connector end with the yellow wire between the separated 2 pin connectors. Insert the T-Connector end with the red wire between the separated 3 pin connectors (F). Make sure the connectors are fully inserted with locking tabs in place.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

5. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. Clean the ground area from any rust, dirt or paint. Secure the white ground wire using the ring terminal and screw provided.

- 6. Route the T-Connector end with the green wire to the passenger side behind the removed scuff panel. Repeat Step 2 on the 2 pin connector on the passenger side using the T-Connector end with the green wire. Use the provided cable ties to secure any loose wires.
- 7. Route the 4-flat wire to the center of the vehicle. Secure the 4-flat to the center of the vehicle in a convenient, out of the way location. Secure any loose wires with the cable ties provided.
- 8. Inside the vehicle, locate a flat spot and adhere the black converter box using the double-sided tape provided.
- 9. Reinstall all items removed during install.
- 10. Reconnect the negative battery terminal. IMPORTANT:

Exceeding the product's load rating can cause loss of warranty, overheating and potentially fire. Do not exceed the tow vehicle's lamp load rating or the product rating, whichever is lower:

Signal Circuits: 3.0 Amps

Tail/Running Light Circuits: 7.5 Amps

Check the vehicle owner's manual or contact the vehicle's manufacturer for more information.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813



56194MAZDA 3 WITH OUT LED TAILLIGHTS

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

IDEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filetée.

11/27/2013

English

- 1. Access the vehicle's wiring harness connectors in the trunk behind the taillight in positions P3 and P4 as shown in the Wiring Location Guide.
- 2. Locate the vehicle's battery on the driver's side under the hood and disconnect the negative battery terminal.
- 3. Open the trunk. Remove all trunk floor coverings (A). Remove the two plastic push fasteners on each side of the rear scuff panel (B). Remove the scuff panel by pulling out on the bottom and then up (C).
- 4. Remove the two push fasteners in the side scuff panels and the three push fasteners in the felt trunk liner (D,E).
- 5. On the driver's side pull back on the felt trunk liner to locate the vehicle's taillight wiring harness connectors (F). The connectors will be similar to those on the T-Connector harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs.
- 6. Insert the T-Connector end with the yellow wire between the separated 2 pin connectors. Insert the T-Connector end with the red wire between the separated 3 pin connectors. Make sure the connectors are fully inserted with locking tabs in place.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

7. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt or paint. Secure the white ground wire using the ring terminal and screw provided.

- 8. Route the T-Connector end with the green wire to the passenger side behind the removed scuff panels. Repeat Steps 4-6 on the passenger side using the T-Connector end with the green wire. Use the provided cable ties to secure any loose wires.
- 9. Inside the vehicle, locate a flat spot and adhere the black converter box using the double-sided tape provided.
- 10. Route the 4-flat wire to the center of the vehicle. Secure the 4-flat to the center of the vehicle in a convenient, out of the way location. Secure any loose wires with the cable ties provided.
- 11. Reinstall all items removed during install. IMPORTANT!

The battery connection must be fuse protected, 10 amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed the tow vehicle's lamp load rating or the product rating, whichever is lower:

Signal Circuits - 3.0 amps per side

Tail/Running Circuits - 7.5 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

12. Connect negative battery terminal.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813



