

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

NP92-86/ Oe32-86/ SL62-86/ SP82-86/ TR42-86/ TRS42-86

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Lift cushion up by pulling on tab
- 2) Center cover on seat
- 3) Pass the front strap under seat and buckle

A) CUSHION COVERS:

- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalized tension

B) BACKREST COVER - 60 PORTION (SEE NOTE BELOW):

 
- 1) With cushion still in up position, unlatch backrest from back wall by pulling on tab
- 2) Remove headrest (see note below)
- 3) Remove seat belt buckle from pocket on backrest.
- 4) Open zipper
- 5) Slip cover over backrest under center seat belt (see note below)
- 6) Detach velcro on cover to fit around center seat belt and close
- 7) Place center buckle through opening on cover
- 8) Tuck flaps through crevice under backrest.
- 9) Fold down backrest, close zipper (see note)
- 10) Attach flaps to Velcro at back
- 11) Place side seat belt buckle through elastic on center
- 12) Replace headrests (see note)

C) BACKREST COVER - 40 PORTION (SEE NOTE BELOW):

- 1) With cushion still in up position, unlatch backrest from back wall by pulling on tab
- 2) Remove headrest (see note below)
- 3) Remove seat belt buckle from pocket on backrest.
- 4) Slip cover over backrest (see note below)
- 5) Tuck flaps through crevice under backrest
- 6) Fold down backrest
- 7) Attach flaps to Velcro at back
- 8) Place side seat belt buckle through elastic on cover
- 9) Replace headrest (see note)


Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

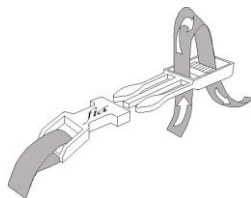

2) HEAD REST REMOVAL:

 Push in side release buttons
- Lift off
(If unable to remove consult dealership)

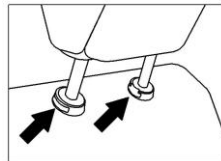

3) BACKREST COVERS:

A) Allowance in backrest is for the child restraint system anchor

4) RE-INSTALLATION OF HEADRESTS:

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests.

5) ZIPPERS:

- A) For ease in installation the zipper is longer than the cover.
- B) Tuck excess zipper under cover

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com