

If you have any comments or concerns,  
 please feel free to contact our  
 customer service department at:  
 Toll-free: 1-800-835-0438  
 OR  
 Email: info@gofia.com

SEAT COVERS  
 BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
 FOR  
**OE32-28, SP82-28, TR42-28**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER:**

 
- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1) Remove head rest (see note)</li> <li>2) Slip cover over backrest under center seat belt.. Holding cushion up in ¾ position allows for better access</li> <li>3) With seat cushion in down position, smooth cover from top to bottom</li> <li>4) Feed the back straps behind the seat so they go all the way down. Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. (see note)</li> </ol> | <ol style="list-style-type: none"> <li>5) Reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover</li> <li>6). Tuck bottom of cover through crevice under backrest and tighten all straps</li> <li>7 Locate bottom right flap through crevice and hold at back of seat With other hand bring the side flap around and attach (see note)</li> <li>8) Repeat on left side</li> <li>9) Adjust all straps, buckles and velcro</li> </ol> |
|--|---|

**B) CUSHION COVER:**

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1) Center cover on the seat</li> <li>2) Tuck back flap through crevice</li> <li>3) Lift seat and pass the front strap under seat and buckle</li> </ol> | <ol style="list-style-type: none"> <li>4) Pass side straps around the back of seat and buckle</li> <li>5) Adjust straps and buckles to equalize tension</li> </ol> |
|---|--|

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

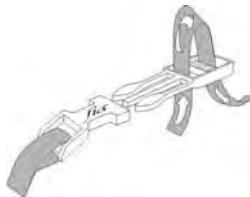


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
 - Lift off

**OR**

- B) - Push in side release buttons  
 - Lift off

 
(If unable to remove consult dealership)

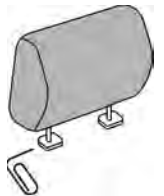

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
 B) Replace headrests

 **4) FEEDING BACK STRAPS ON BACKREST**

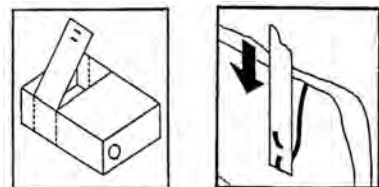

**5) BOTTOM FLAP INSTALLATION**



**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**

