

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR42-19, Oe32-19, SP82-19, SL62-19
TR42-30, Oe32-30, SP82-30, SL62-30

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVERS:


- 1) Remove headrests (see note below)
- 2) Slide cover under seatbelt and slip over backrest. Holding cushion up in $\frac{3}{4}$ position allows for better access
- 3) Feed straps behind the seat
- 4) With cushion down, smooth cover tightly from top to bottom
- 5) Locate straps and secure to buckles on seat cover
- 6) Tuck bottom of cover through crevice under backrest and tighten straps and buckles
- 7) Locate bottom right flap through crevice and hold at back of seat.
- 8) With other hand bring the side flap around and attach (see note below)
- 9) Repeat on other side
- 10) Adjust all straps, buckles and velcro to ensure a snug fit
- 11) Re-install headrests (see note below)
- 12) Re-install headrests (see note below)

B) CUSHION COVERS:

- 1) Center cover on the seat. Cover has opening with velcro for seat belt buckle (see note below)
- 2) Tuck back flap through crevice
- 3) Lift seat and pass the front strap under seat and buckle
- 4) Pass side straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension and ensure a snug fit

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

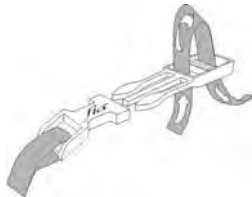

2) HEAD REST REMOVAL:

If the cushion is held up in $\frac{3}{4}$ position, the backrest will slant forward and make for easier removal.

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



3) BOTTOM FLAP INSTALLATION



5) RE-INSTALLATION OF HEADRESTS

If the cushion is held up in $\frac{3}{4}$ position, the backrest will slant forward and make for easier re-installation.

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

4) SEAT BELT OPENING:

- Detach velcro pieces.
- Slide cover under seat belt base
- Re-attach velcro around seat belt base
- Slip elastic loop over seat belt buckle

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

2-19-11