

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
Oe32-34, TR42-34, SP82-34, SL62-34

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVERS:


1. Center cover on seat
2. Lift cushion halfway to up position
3. Insert strap through crevice and buckle
4. Attach velcro to carpet on underside of cushion
5. Adjust all straps, buckles and velcro to equalize tension

B) BACKREST COVER:

1. Slip cover over backrest. Ensure cover is installed under seat belt strap.
2. Starting with one side, tuck stretch fabric behind seat.
3. Repeat on other side
4. Tuck stretch fabric between headrest post and backrest Behind seat.
5. Pass strap with velcro behind the seat and down to the floor. (see notes below)
6. Secure to velcro on the bottom of seat cover
7. Adjust all velcro for a uniform fit

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

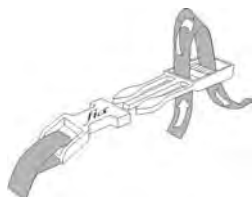

3) Due to restricted space, a 2" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. If desired, the strip can be cut from the seat cover box.



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com