

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: [info@gofia.com](mailto:info@gofia.com)

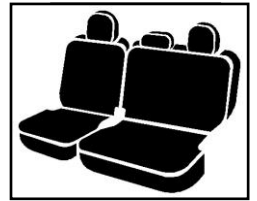 
SEAT COVERS  
BY



**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR  
Oe32-37



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**We recommend installation begin with the cushion covers. For easier installation, remove the tire jack from the base behind passenger cushion. Replace the tire jack after installation is complete.**

**A. CUSHION COVERS:**

- |                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1) Center cover on cushion</li> <li>2) Position openings in cover over child seat anchors attaching velcro to carpet</li> <li>3) Tuck back flap through crevice</li> </ol> | <ol style="list-style-type: none"> <li>4) Lift seat. Locate strap and secure to buckle on cover</li> <li>5) Attach side velcro to the underside of cushion</li> <li>6) Adjust all velcro, straps and buckle to equalize tension and ensure a snug fit</li> </ol> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

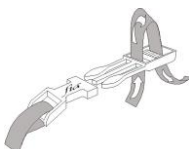 
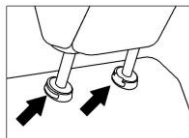 
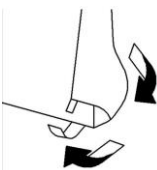 
**B. BACKREST COVER – 40 PORTION:**

- |                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1) Remove headrests (see note below)</li> <li>2) Pull tab on side of backrest to release</li> <li>3) Slip cover over backrest</li> <li>4) Position pocket allowance on cover over bottom side flap of seat</li> <li>5) tuck bottom of cover through crevice</li> <li>6) With backrest in down position locate strap and secure to buckle on cover</li> </ol> | <ol style="list-style-type: none"> <li>7) Apply side velcro to bottom flap (see note below)</li> <li>8) Repeat on other side</li> <li>9) Adjust all straps, buckles and velcro to ensure a snug fit</li> <li>10) Re-install headrest (see note below)</li> </ol> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**C. BACKREST COVER – 60 PORTION:**

- |                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> <li>1) Remove headrests (see note below)</li> <li>2) Release backrest from the back wall (see note below)</li> <li>3) Slip cover over backrest</li> <li>4) Position pocket allowance on cover over bottom side flap of seat</li> <li>5) Tuck bottom of cover through crevice</li> <li>6) With backrest in down position locate strap and secure to buckle on cover</li> </ol> | <ol style="list-style-type: none"> <li>7) Apply side velcro to bottom flap (see note below)</li> <li>8) Repeat on other side</li> <li>9) Adjust all straps, buckles and velcro to ensure snug fit</li> <li>10) Place backrest back to original position and lock (see note below)</li> <li>11) Re-install headrest (see note below)</li> </ol> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**NOTES:**

|                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1) <b>SELF-LOCKING SUPER-GRIP® BUCKLE:</b></p>                                                                                 | <p>2) <b>HEAD REST REMOVAL:</b><br/>If the cushion is held up in ¾ position, the backrest will slant forward and make for easier removal.</p>  <p>- Push in side release buttons and lift off<br/>(If unable to remove consult dealership)</p> |
| <p>3) <b>BOTTOM FLAP INSTALLATION</b></p>                                                                                         | <p>4) <b>RE-INSTALLATION OF HEADRESTS</b><br/>If the cushion is held up in ¾ position, the backrest will slant forward and make for easier re-installation.<br/>A) Ensure pre-cut holes in seat cover align with holes in headrest base.<br/>B) Replace headrests</p>                                                              |
| <p>5) <b>BACKREST RELEASE – 60 PORTION</b><br/>A) Lift the cushion to up position<br/>B) Locate the pull tab or slide the pin on the side to release backrest<br/>C) Click sound indicates backrest is released.</p> | <p>6) <b>LOCKING BACKREST – 60 PORTION</b><br/>A) Position the metal bar to align with the white dot or to blue line<br/>B) Push backrest back until you hear a click</p>                                                                                                                                                          |

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: [info@gofia.com](mailto:info@gofia.com) Website: [www.gofia.com](http://www.gofia.com)