

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR
TR42-82, Oe32-82, SP82-82

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER - 60 PORTION:

- 1) Remove headrest (see note below)
- 2) Open zipper
- 3) Slip cover over backrest under center seat belt
- 4) Tuck flaps through crevice under backrest
- 5) Fold down backrest, close zipper (see note)
- 6) Attach flaps to Velcro at back
- 7) Replace headrests (see note)

B) BACKREST COVER - 40 PORTION:

- 1) Remove headrest
- 2) Slip cover over backrest
- 3) Tuck flaps through crevice under backrest
- 4) Fold down backrest
- 5) Attach flaps to Velcro at back
- 6) Replace headrest (see note)

C) CUSHION COVERS:

- 1) Center cover on seat
- 2) Tuck back flap through crevice
- 3) Lift the seat up and pass the front strap under seat and buckle
- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalized tension

Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:




2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

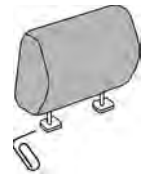

3) RE-INSTALLATION OF HEADRESTS:

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

4) ZIPPERS:

- A) For ease in installation the zipper is longer than the cover.
- B) Tuck excess zipper under cover

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

