

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS BY



FEATURING **SUPER-GRIP®** **THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS FOR TR42-84, Oe32-84, SP82-84, SL62-84

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVERS:

- 1) Lift cushion up by pulling on tab
- 2) Center cover on seat
- 3) Pass the front strap under seat and buckle
- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalized tension

B) BACKREST COVER - 60 PORTION (SEE NOTE BELOW):

 
- 1) With cushion still in up position, unlatch backrest from back wall by pulling on tab
- 2) Remove headrest (see note below)
- 3) Open zipper
- 4) Slip cover over backrest under center seat belt (see note below)
- 5) Tuck flaps through crevice under backrest.
- 6) Fold down backrest, close zipper (see note)
- 7) Attach flaps to Velcro at back
- 8) Replace headrests (see note)

C) BACKREST COVER - 40 PORTION (SEE NOTE BELOW):

- 1) With cushion still in up position, unlatch backrest from back wall by pulling on tab
- 2) Remove headrest (see note below)
- 3) Slip cover over backrest (see note below)
- 4) Tuck flaps through crevice under backrest
- 5) Fold down backrest
- 6) Attach flaps to Velcro at back
- 7) Replace headrest (see note)

Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

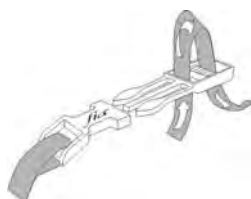


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

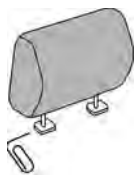

3) BACKREST COVERS:

- A) Allowance in backrest is for the child restraint system anchor

5) ZIPPERS:

- A) For ease in installation the zipper is longer than the cover.
B) Tuck excess zipper under cover

4) RE-INSTALLATION OF HEADRESTS:

- A) Headrest covers must be installed before replacing headrests.

SIDE HEADRESTS:

- i) Headrest posts must be folded down
- ii) Slip cover over headrest and place posts through opening
- iii) Place side lever through opening
- iv) Adjust fit and attach velcro at the back

CENTER HEADREST:

- i) Slip cover over headrest and place velcro tab at back of headrest
- ii) Adjust the fit and velcro at back

- B) Ensure pre-cut holes in seat cover align with holes in base.

- C) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

