

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR47-16, TR47-17
Oe37-16, Oe37-17
SP87-16, SP87-17

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – BUCKETS / “40” PORTION X 2:

- 1) Remove head rest (see note)
- 2) Open zipper
- 3) Slip cover over backrest under seat belt
- 4) Close zipper (see note)
- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER - BUCKETS / “40” PORTION X 2:

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 4) Adjust straps and buckles to equalize tension

C) CUSHION COVER – “20” PORTION:

- 1) Align cover on seat and position seat belt through opening provided
- 2) Pull down cup holder and position adhesive back velcro to align with velcro attached to back flap under top frame of cup holder
- 3) Pass side straps around the back of the seat and buckle
- 4) Adjust straps and buckles to equalize tension

D) BACKREST COVER – “20” PORTION:

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Position adhesive backed velcro (supplied) to align with the velcro on cover
- 4) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged
- 5) Secure the adhesive velcro on the inside back of console

E) ARMREST / STORAGE COMPARTMENT LID COVER

- 1) Open armrest / storage compartment
- 2) Slip cover over lid
- 3) Pull velcro tabs on cover around the hinges on the sides
- 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

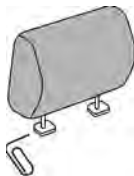

4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com