

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR47-28 / Oe37-28 / SP87-28 / SL67-28
TR47-29 / Oe37-29 / SP87-29 / SL67-29

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER – “40” PORTION X 2:

- 1) Remove head rest (see note)
- 3) Slip cover over backrest. (see air bag warning below)
- 4) Tuck flaps under backrest and attach to Velcro at back
- 5) Adjust Velcro to equalize tension
- 6) Replace headrests (see note)

B) CUSHION COVER – “40” PORTION X 2:

- 1) Align cover on seat and position seat belt buckle through opening provided
- 2) Pass the back flap on the cover through the crevice
- 3) Pass the front strap under seat. Buckle to back flap
- 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 5) Adjust straps and buckles to equalize tension

C) CUSHION COVER – “20” PORTION: (Oe37-28, TR47-28, SP87-28, SL67-28)

- 1) Open cushion lid to up position
- 2) Slip cover over lid, pull side Velcro and attach
- 3) With cushion lid close, position adhesive Velcro (supplied) to align with Velcro on back cover
- 4) Snug cover at back so the Velcro on cover is positioned on metal frame
- 5) Secure adhesive back Velcro on the back metal frame

D) CUSHION COVER – “20” PORTION: (Oe37-29, TR47-29, SP87-29, SL67-29)

- 1) Center cover on the seat
- 2) Pass side strap under the seat and buckle to back flap
- 3) Adjust straps and buckle to equalize tension

E) BACKREST COVER – “20” PORTION

- 1) Remove headrest (see note)
- 2) Open zipper
- 3) Place cover over backrest under seat belt, close zipper
- 4) Snug cover at back of storage compartment so the Velcro on the cover is positioned through the crevice where the lid and storage compartment are hinged
- 5) With armrest down, open storage compartment
- 6) Position adhesive back Velcro (supplied) to align with Velcro on cover
- 7) Secure the Velcro on the inside of storage compartment

F) ARMREST / STORAGE COMPARTMENT LID COVER :

- 1) Open armrest / storage compartment
- 2) Slip cover over lid, with Velcro tabs on back of lid
- 3) Position Velcro tabs on cover on both sides of the hinge
- 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

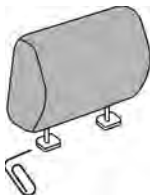

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

8-18-09