If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

 
OR

Email: info@gofia.com

SEAT COVERS

**FEATURING** 

SUPER-GRIP®



INSTALLATION INSTRUCTIONS **FOR** 

Oe37-34



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

### **BACKREST COVER**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. (see air bag warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

#### **CUSHION COVER**

- 1) Release seat belt buckle from elastic holder
- 2) Center cover on the seat
- 3) With seat in highest position, pass back straps under seat through crevice and buckle to front
- 4) Pass long side strap through the opening between the molded plastic and the seat. Buckle to opposite side
- 5) replace seat belt buckle to elastic on cover
- 6) Adjust straps and buckles to equalize tension

# **NOTES:**

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



 
#### 3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

## 2) HEAD REST REMOVAL:

- Push in side release buttons
- Lift off

(If unable to remove consult dealership)



## WARNING: DO NOT BLOCK AIR BAGS

### WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation

