

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR47-64, Oe37-64, SP87-64, SL67-64

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest (see warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back

A) BACKREST COVER X 2:

- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

- 1) For seat with cup holder (see NOTE)
- 2) Position cover over driver cushion
- 3) Pass the front straps under seat. Buckle to back flap
- 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap

B) CUSHION COVER - "60" PORTION:

- 5) Secure velcro to carpet on seat
- 6) Adjust all straps, buckles and velcro to equalize tension

- 1) Position cover over passenger cushion
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap

C) CUSHION COVER - "40" PORTION:

- 4) Adjust straps and buckles to equalize tension

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Position adhesive backed velcro (supplied) to align with the velcro on cover

D) ARMREST / STORAGE COMPARTMENT:

- 4) Secure the adhesive back velcro inside the console

- 1) Open armrest / storage compartment
- 2) Slide cover over lid

E) ARMREST LID

- 3) Adjust cover to go over back and front edge of lid

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
Lift off

OR

- B) Push in side release buttons
Lift off

(If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

4) CUP HOLDER

- A) Slide cup holder up to release from bolts
- B) After the seat cover has been installed, locate the bolts through the stretch fabric and make one slit for each bolt just large enough to allow the bolt to come through (THE STRETCH FABRIC WILL NOT RUN)
- C) Re-install cup holder

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

5-6-10