

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING  
**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR**

**TR49-22, TR49-23, TR49-24  
OE39-22, OE39-23, OE39-24  
SP89-22, SP89-23, SP89-24**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVERS – BUCKETS / “40” PORTIONS:**

- 1) Remove head rest (see note below)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly
- 4) Tuck flaps through crevice and attach to Velcro at back
- 5) Replace headrests (see note below)

**B) CUSHION COVERS – BUCKETS / “40” PORTIONS:**

- 1) Center cover on the seat
- 2) Pass straps through crevice, under seat and buckle to front
- 3) Pass side straps through the opening between the molded plastic and the seat
- 4) Pass the straps around the back and buckle
- 5) Adjust straps and buckles to equalize tension

**C) BACKREST COVER – “20” PORTION (TR49-23, OE39-23, SP89-23, TR49-24, OE39-24, SP89-24) :**

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged
- 4) Position adhesive back Velcro, supplied, to align with the velcro on cover

**D) CUSHION COVER – CENTER “20” PORTION (TR49-24, OE39-24, SP89-24)**


- 1) Center cover on the seat
- 2) Pass front straps under seat and buckle to back flap
- 3) Pass side strap around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

**E) CUSHION COVER – CENTER “20” PORTION (TR49-23, OE39-23, SP89-23)**

- 1) Open cushion lid to up position
- 2) Center the cover on the seat
- 3) Tuck the back part of cushion cover through seat crevice
- 4) Pass the side straps under back corners of seat and secure to the end buckles
- 5) Adjust straps/buckles to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

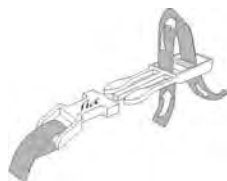

**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release
- Lift off

**OR**

- B) - Push in side release buttons
  - Lift off
- (If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

3-26-09