SEAT COVERS

If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

By

Featuring SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR TR42-3, TR42-14 Oe32-14, SL62-14

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The Super Grip Buckles are self-locking. For proper usage, see diagram.

CUSHION COVER: 60 SIDE

- 1. position seat cover over seat cushion to align opening for seat belt and release latch (on TR42-3 Only)
- 2. pull seat cover down tightly over corners
- 3. unlatch seat cushion and place in up position
- 4. pass the front straps under the seat and secure to back buckles

Repeat above steps for 40 side

BACK REST COVER:

- 1. locate four loops and straps sewn into backrest cover
- 2. locate the 4 bolts at the back, top of seat
- 3. beginning with right side, hook loops over the four bolts see diagram (b)
- 4. position the right and left straps behind the edge of the back rest see diagram (c)
- 5. position the two center straps down the front of backrest
- 6. pull down tightly on backrest cover so that the side borders tuck in behind the backrest.
- 7. buckle right and left straps to bottom backrest buckles
- pass two centre straps around metal brackets located at the botto behind backrest
- see figure (d)
- 9. buckle centre two straps to bottom backrest buckles
- 10. adjust all straps/buckles to equalize tension for a uniform fit



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



