If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR Oe32-16, TR42-16, SP82-16, SL62-16

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- Remove seat belt buckles from holder on cushion
- 2. Center cover on seat
- 3. Slip seat belt buckles through elastics on seat covers
- 4. Lift cushion halfway to up position


A) CUSHION COVERS:

- 5. Insert strap through crevice and buckle
- 6. Attach velcro to carpet on underside of cushion
- 7. Adjust all straps, buckles and velcro to equalize tension

B) BACKREST COVER:

- 1. Remove headrests (see NOTE 2)
- 2. Slip cover over backrest. Ensure cover is installed under seat belt
- 3. Pass top straps behind the seat so they go to floor (see NOTE 3)
- 4. Tuck in bottom of seat cover between seat backrest and metal bar (see NOTE 4)
- 5. With seat cushion in up position locate the straps (from step 3.) and secure to velcro tabs on seat cover (see NOTE 5)
- 6) Tuck in the 3 velcro straps through crevice and loop around the metal bar and secure (see NOTE 6)
- 7) Secure side velcro to the carpet side of seat backrest
- 8) Adjust all velcro for a uniform fit
- 9) Reinstall headrests (see NOTE 7)

NOTES:

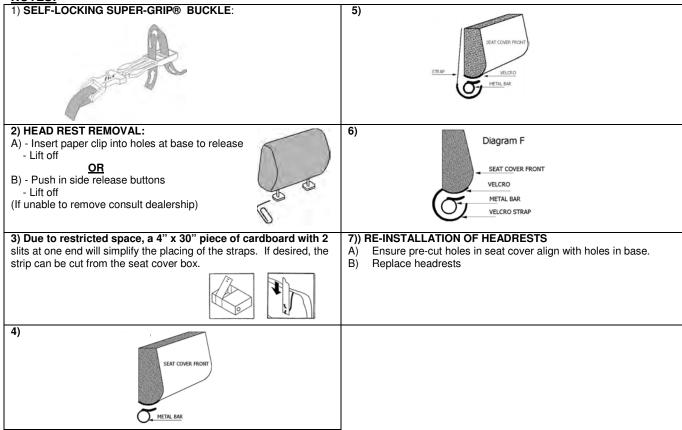

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com