

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING  
**SUPER-GRIP®**  
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS  
FOR  
Oe32-20, TR42-20, SP82-20, SL62-20

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) CUSHION COVERS:**

1. Remove seat belt buckles from elastic holder on cushion
2. Center cover on seat
3. Lift cushion halfway to up position
4. Insert strap through crevice and buckle
5. Attach velcro to carpet on underside of cushion
6. Slip seat belt buckles through elastics on seat cover
7. Adjust all straps, buckles and velcro to equalize tension

**B) BACKREST COVER:**


1. Slip cover over backrest. Ensure cover is installed under seat belt strap
2. Snug cover and tuck in bottom of seat cover between seat backrest and metal car seat hook up.
3. Place both top corner straps with velcro on side of the backrest
4. With seat cushion in up position, locate and pull strap/velcro forward through crevice and secure velcro on bottom of cover
5. Pass center straps behind the seat so they go to floor (see note 2) and secure to velcro on bottom of cover
6. Adjust all velcro for a uniform fit

**NOTES:**

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) Due to restricted space, a 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. If desired, the strip can be cut from the seat cover box.

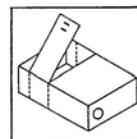

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

5-11-10