If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

SEAT COVERS BY

a

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR TR42-24, TR42-25 Oe32-24, Oe32-25 SL62-24, SL62-25 SP82-24, SP82-25

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION:

1) Remove head rest (see note)

- 2) Slip cover over backrest. Holding cushion up in 3/4 position allows for better access
- 3) Pass straps behind the seat straight down

4) Smooth cover tightly from top to bottom

- 5) FOR TR42-24/OE32-24: Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover
 - B) BACKREST COVER 40 PORTION:

1) Repeat steps 1 – 4 from A) above

2) Repeat steps 6 – 10 from A) above

C) CUSHION COVER - 60 PORTION AND 40 PORTION:

1) Center cover on the seat

2) Tuck back flap through crevice

3) Lift seat and pass the front strap under seat and buckle

D) ARMREST COVER (TR42-24, Oe32-24, SP82-24)

1) Fold down armrest

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



RE-INSTALLATION OF HEADRESTS A) Ensure pre-cut holes in seat cover align with holes in headrest base.

2) Slip cover over armrest and attach velcro

B) Replace headrests

2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release - Lift off OR

-
- B) Push in side release buttons
- Lift off
- (If unable to remove consult dealership)



4) BOTTOM FLAP INSTALLATION



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

ria

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

6) Tuck bottom of cover through crevice under backrest7) Locate straps and secure to buckles on seat cover

4) Pass side straps around the back of seat and buckle

5) Adjust straps and buckles to equalize tension

- 8) Locate bottom right flap through crevice and hold at back of seat.
 With other hand bring the side flap around and attach (see note)
- 9) Repeat on left side
- 10) Adjust all straps, buckles and velcro
- $\frac{1 \text{ COVER} 40 \text{ PORTION:}}{2} \text{ Beneat steps 6} = 10 \text{ from A} \text{ a}$