

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR  
SL62-29**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – 40 PORTION:**

- |   |  |
|---|--|
| 1) Remove headrest (see note)   | 4) Pull down firmly and tuck bottom of cover through crevice           |
| 2) Remove plastic cargo cover from behind the seat by pushing side release button where metal post is and lift off. Repeat on other side. | 5) Unlatch backrest and fold down flat                                 |
| 3) Slip cover over backrest and place latch through opening provided.   | 6) Bring bottom of cover from crevice and velcro to back of seat cover |

**B) BACKREST COVER – 60 PORTION:**

- |   |   |
|---|---|
| 1) Remove headrest (see note)   | 6) pull down firmly and tuck bottom of cover through crevice                          |
| 2) Undo zipper and velcro on cover  | 7) Tuck side velcro on cover through opening.   |
| 3) Slip cover over backrest and place latch through opening provided                    | 8) Unlatch backrest and fold down flat.   |
| 4) Ensure cover is under center seat belt strap and armrest is through opening in cover | 9) Apply velcro on back carpet of backrest  |
| 5) Tuck bottom flap on cover behind armrest and velcro                                  | 10) Close zipper and bring bottom cover from crevice and velcro to back of seat cover |

**C) ARMREST COVER:**

 
- |   |  |
|---|--|
| 1) Undo velcro on cover   | 3) For a cleaner look around the cup holder we suggest tucking the material between the plastic cup holder and armrest |
| 2) Slip cover over armrest and velcro. Cover has opening for pull tab |  |

**D) CUSHION COVER:**

- |  |  |
|--|--|
| 1) Bring backrest to up position and seat to most forward position               | 7) Pass all straps under the seat to the front. (See note below)   |
| 2) Center seat cover over cushion and pull down side panel                       | 8) Bring backrest to up position and seat to most back position    |
| 3) Place seat belt buckle through opening provided                               | 9) Reach strap under cushion and buckle to front and side of cover |
| 4) Slip car seat hook up on each side close to the door through opening provided | 10) Adjust all velcro and straps to equalize tension               |
| 5) Tuck back flap with long strap through crevice                                | 11) Replace plastic cargo cover behind the seat                    |
| 6) Unlatch backrests and fold down flat  | 12) Replace headrests (see note)                                   |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

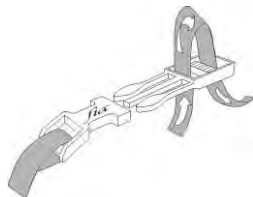

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests

 
**2) HEAD REST REMOVAL:**

Insert paper clip into hole in base of one post. Repeat on second post while holding head rest up. Remove headrest.  
(If unable to remove consult dealership)



**4) FEEDING BACK STRAPS UNDER SEAT CUSHION**

Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. (see note)

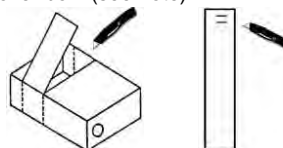

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

