If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR

Email: info@gofia.com



SEAT COVERS



SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR SL62-38

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

We recommend installation begin with the cushion covers. For easier installation, remove the tire jack from the base behind passenger cushion. Replace the tire jack after installation is complete.

A. CUSHION COVER - 40 PORTION:

- Center cover on the seat.
 Tuck back flap through crevice
- 3) Lift seat. Locate strap and secure to buckle on cover

5) Adjust all velcro, straps and buckle to equalize tension and ensure a snug fit
 B. <u>CUSHION COVER – 60 PORTION:</u>
 a) for seat belt
 4) Attach side velcro to the underside of cushion

5) Adjust all velcro, straps and buckle to equalize tension and

4) Attach side velcro to the underside of cushion

1) Center cover on the seat. Cover has opening with velcro for seat belt

buckle (see note below)

2) Tuck back flap through crevice

3) Lift seat. Locate strap and secure to buckle on cover

2) Release backrest from the back wall (see note below)

1) Remove headrests (see note below)

2) Pull tab on side of backrest to release

3) Slip cover over backrest

3) Slip cover over backrest

cover

4) Tuck bottom of cover through crevice

1) Remove headrests (see note below)

4) Tuck bottom of cover through crevice

5) With backrest in down position locate strap and secure to buckle on cover

5) With backrest in down position locate strap and secure to buckle on

C. BACKREST COVER - 60 PORTION:

- 6) Apply side velcro to bottom flap (see note below)
 - 6) Repeat on other side
 - 8) Adjust all straps, buckles and velcro to ensure snug fit
 - 9) Place backrest back to original position and lock (see note below)
- 10) Re-install headrest (see note below)

1) SELF-LOCKING SUPER-GRIP® BUCKLE:	 2) SEAT BELT OPENING Detach velcro pieces. Slide cover under seat belt base Re-attach velcro around seat belt base Slip elastic loop over seat belt buckle
3) HEAD REST REMOVAL: If the cushion is held up in ³ / ₄ position, the backrest will slant forward and	4) BOTTOM FLAP INSTALLATION
make for easier removal.	
- Push in side release buttons and lift off	
(If unable to remove consult dealership)	
5) RE-INSTALLATION OF HEADRESTS	6) BACKREST RELEASE – 60 PORTION
If the cushion is held up in ³ / ₄ position, the backrest will slant forward and make for easier re-installation.	 A) Lift the cushion to up position B) Locate the pull tab or slide the pin on the side to release backrest
A) Ensure pre-cut holes in seat cover align with holes in headrest base.	C) Click sound indicates backrest is released.
B) Replace headrests	
 7) LOCKING BACKREST – 60 PORTION A) Position the metal bar to align with the white dot or to blue line 	
B) Push backrest back until you hear a click	

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



- B. BACKREST COVER 40 PORTION: 6) Apply side velcro to bottom flap (see note below)
 - 7) Repeat on other side

ensure a snug fit

- 8) Adjust all straps, buckles and velcro to ensure a snug fit
- 9) Re-install headrest (see note below)