

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

TR42-46, TR42-461

Oe32-46, Oe32-461

SL62-46, SL62-461

SP82-46, SP82-461

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – (TR42-46 / Oe32-46 / SP82-46):

- | | |
|--|--|
| 1) Remove head rest (see note) | 5) Fold backrest forward to most flat position |
| 2) Slip armrest through the opening in cover | 6) Attach velcro at back of cover to bottom flap of seat cover |
| 3) Slip cover over backrest and pull down firmly | 7) Adjust velcro to equalize tension |
| 4) Tuck excess material through crevice | 8) Replace headrest (see note) |

B) BACKREST COVER – (TR 42-461 / Oe42-461 / SP82-461)

- | | |
|---|---|
| 1) Remove headrest (see note) | 6) Pass center straps through crevice between the molded plastic and the seat |
| 2) Slip cover over backrest and pull down firmly | 7) Buckle straps to back flap |
| 3) Tuck excess material through crevice | 8) Adjust straps and velcro to equalize tension |
| 4) Fold backrest forward to most flat position | |
| 5) Attach side velcro behind the seat to bottom corner flap of seat cover | |

C) CUSHION COVER

- | | |
|--|--|
| 1) Center cover on seat | 5) Pass the side straps under the back corners of the seat and secure to the end buckles |
| 2) Position seat belt buckle through opening provided | 6) Adjust all straps and buckles to equalize tension for a uniform fit |
| 3) Tuck the back part of the cushion cover through the crevice | |
| 4) Pass the front straps under the seat and secure to center buckles | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

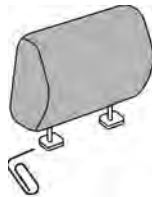

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

4-29-08