

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR42-73, Oe32-73, SP82-73, SL62-73

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER:

- 1) Remove headrest (see note below)
- 2) Slip cover over backrest
- 3) Tuck bottom cover through crevice under backrest
- 4) Fold down backrest, attach velcro at bottom
- 5) Replace headrests (see note)

B) CUSHION COVERS:

- 1) Center cover on seat. Cover has allowance for center buckle and for child restraint system anchors.
- 2) Tuck back of cover through crevice
- 3) Lift the seat up and pass the front strap under seat and buckle
- 4) Pass side straps around the back of seat and buckle
- 5) Adjust straps and buckles to equalized tension

Notes:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS:

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

