

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR
SL62-75**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVERS

1. Center cover on seat
2. Tuck straps through crevice
3. Bring front and side stretch material down
4. Pass back strap under seat and buckle to front
5. pass side straps under seat and buckle across
6. Adjust straps and buckles to equalize tension

B) BACKREST COVER 40 SECTION

1. Open side velcro on cover
2. Unlatch backrest and hold down in $\frac{3}{4}$ position
3. Slip cover over backrest. Headrests are not removable. Cover has allowances for headrests
4. Place latch through opening provided
5. Pass bottom velcro on cover through crevice and place backrest in fold flat position
6. Close side velcro and pull bottom velcro through crevice and velcro at back
7. Place backrest in $\frac{3}{4}$ up position and tuck in cover flap around headrest post
8. Smooth cover from top to bottom. Adjust velcro if required

C) BACKREST COVER 60 SECTION

NOTE: FOR EASE OF INSTALLATION PLACE 40 SECTION IN FOLD FLAT POSITION

1. Open zipper on cover
2. Slip cover over backrest. Headrests are not removable. Cover has allowances for headrests
3. Ensure cover is installed under seat belt
4. Place latch through opening provided
5. Unlatch backrest and hold down in $\frac{3}{4}$ position
6. Pass bottom velcro on cover through crevice and place backrest in fold flat position
7. Close zipper and pull bottom velcro through crevice and velcro at back
8. Place backrest in $\frac{3}{4}$ up position and tuck in cover flap around HR post
9. Smooth cover from top to bottom. Adjust velcro if required

NOTES:

- 1) SELF-LOCKING SUPER-GRIP® BUCKLE:

