

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**  
**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR  
**OE32-81, SL62-81, SP82-81, TR42-81**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**A) BACKREST COVER – 60 PORTION**

- |  |  |
|--|--|
| 1) Move seat forward and remove headrests (see notes)                                      | 6) Fold down backrest and bring both sides of cover around the back and close velcro on the bottom band of cover |
| 2) Detach velcro on top and bottom back band of cover                                      | 7) Bring elastic with velcro from under the seat around the back and attach to bottom band carpeting on cover    |
| 3) Slip cover over backrest under seat belt allowing armrest through cover                 | 8) Bring backrest to up position, adjust cover and velcro to equalize tension for a better fit.                  |
| 4) Close velcro to fit around center seat belt at top, align slits to headrests post base. | 9) Replace headrests (see note)  |
| 5) Tuck in elastic with velcro on the bottom crevice                                       |  |

**B) BACKREST COVER – 40 PORTION**

- |   |   |
|---|---|
| 1) Move seat forward and remove headrests (see notes)   | 5) Bring backrest to up position, adjust cover and velcro to equalize tension for a better fit. |
| 2) Slip cover over backrest   | 6) Replace headrest (see note)  |
| 3) Tuck in elastic with velcro on the bottom crevice  |   |
| 4) Fold down backrest and bring elastic/velcro from under seat around the back and attach to bottom band carpeting on cover |   |

**C) CUSHION COVERS**

- |  |   |
|--|---|
| 1) Center cover on the seat, cover has allowance for seat belt buckle. | 4) Fold down backrest and pass side straps around the back and buckle |
| 2) Tuck the back part of the cover through the seat crevice            | 5) Adjust all buckles and straps for a uniform fit                    |
| 3) Pass straps under the seat and buckle to front                      |   |

**D) ARMREST COVER**

- |                      |  |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**2) HEAD REST REMOVAL:**

- A) Insert paper clip into holes at base to release  
B) Lift off

**OR**

- A) Push in side release buttons  
B) Lift off  
(If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

7-10-09