

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR47-14, TR47-15
Oe37-14, Oe37-15
SL67-14, SL67-15

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

INSTRUCTIONS:

A) BACKREST COVER - BUCKETS / "40" PORTION:

- 1) Move seat to most forward position
- 2) Remove head rest (see note)
- 3) Slip cover over backrest – pull down firmly
- 4) Tuck flaps under backrest and attach to velcro at back
- 6) Adjust velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER - BUCKETS / "40" PORTION:

- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle
- 3) Pass side straps around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

C) CUSHION COVER – "60" PORTION:

- 1) Align cover on seat and position seat belt through opening provided
- 2) Pass the strap that is attached to the flap by the seat belt cut-out through the seat belt opening under the seat and secure with side strap buckle or flap buckle (see note)
- 3) **For TR47-15 / Oe37-15 only.**
 - a) Seat **with built-in cup holder.** Pull down cup holder and position adhesive back velcro to align with velcro attached to back flap under top frame of cup holder
 - b) Seat **without cup holder.** The back flap will adhere to back of seat without the use of adhesive back velcro
- 4) Pass front strap under seat and buckle
- 5) Pass side strap around the back of the seat and buckle
- 6) Adjust straps and buckles to equalize tension

D) ARMREST / STORAGE COMPARTMENT COVER

For models TR47-15 / Oe37-15

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3)) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged
- 4) Position adhesive backed velcro (supplied) to align with the velcro on cover
- 5) Secure the adhesive velcro on the inside back of console

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off


(If unable to remove consult dealership)

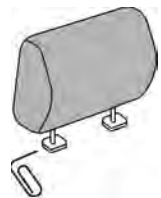

3) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

 4)

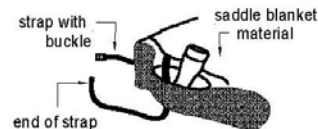

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

12-14-07