

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

TR47-18, Oe37-18, SL67-18, SP87-18

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

BACKREST COVERS

- | | |
|--|--|
| 1) Remove head rest (see note below)
2) Open side velcro
3) Slip cover over backrest. Ensure velcro is on the inner side of the seat (facing other bucket) | 4) Fasten velcro
5) Tuck flaps under backrest and attach to Velcro at back
6) Adjust Velcro to equalize tension
7) Replace headrests (see note below) |
|--|--|

CUSHION COVERS

- | | |
|--|--|
| 1) Center cover on the seat
2) Pass the front strap under seat. Buckle to back flap
3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap | 4) Adjust straps and buckles to equalize tension |
|--|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

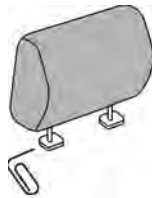

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com