If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

TR47-19

Oe37-19

SL67-19 SP87-19

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

BACKREST COVER - BUCKETS / "40" PORTION X 2:

- 1) Remove head rest (see note)
- 2) Open side velcro
- 3) Slip cover over backrest. Ensure velcro is on the inner side of the seat (facing other bucket)
- 4) Fasten velcro
- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER - BUCKETS / "40" PORTION X 2:

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 4) Adjust straps and buckles to equalize tension

C) CUSHION COVER - "20" PORTION:

- 1) Align cover on seat and position seat belt through opening provided
- 2) Pull down cup holder and position adhesive back velcro to align with velcro attached to back flap under top frame of cup holder
- 3) Pass side straps around the back of the seat and buckle
- 4) Adjust straps and buckles to equalize tension

D) BACKREST COVER - "20" PORTION:

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Position adhesive backed velcro (supplied) to align with the velcro on cover
- 4) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged
- 5) Secure the adhesive velcro on the inside back of console

ARMREST / STORAGE COMPARTMENT LID COVER

- 1) Open armrest / storage compartment
- 2) Slip cover over lid
- 3) Position velcro tabs on cover on both sides of the hinge
- 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release - Lift off
 - OR
- B) Push in side release buttons
 - Lift off

(If unable to remove consult dealership)



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

12-10-08