If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR

SEAT COVERS RV

FEATURING

Email: info@gofia.com

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR TR47-24, Oe37-24, SL67-24, SP87-24 TR47-25, Oe37-25, SL67-25, SP87-25 TR47-26, Oe37-26, SL67-26, SP87-26

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

BACKREST COVER - BUCKETS / "40" PORTION X 2: 5) Adjust Velcro to equalize tension

1) Remove head rest (see note)

- 3) Slip cover over backrest. (see air bag warning below)
- 4) Tuck flaps under backrest and attach to Velcro at back

CUSHION COVER - BUCKETS / "40" PORTION X 2:

6) Replace headrests (see note)

plastic and the seat. Buckle to back flap

5) Adjust straps and buckles to equalize tension

1) Align cover on seat and position seat belt buckle through opening

B)

- provided
- 2) Pass the back flap on the cover through the crevice
- 3) Pass the front strap under seat. Buckle to back flap

c) CUSHION COVER - "20" PORTION (TR47-24, Oe37-24, SP87-24, TR47-25, Oe37-25, SP87-25):

4) Adhere velcro on the sides and back of cover to carpeting under the seat cushion

4) Pass side straps through the opening between the molded

2) Open cushion lid to up position 3) Tuck the back part of cushion cover through seat crevice

D) BACKREST COVER - "20" PORTION (TR47-25, Oe37-25, SP87-25):

1) Slip cover over backrest and attach velcro

BACKREST COVER - "20" PORTION (TR47-24, Oe37-24, SP87-24): E) 4) Snug cover at back of console so the velcro on the cover is

- 1) Open armrest / storage compartment
- 2) Center cover under armrest

1) Center cover on the seat

3) Position adhesive backed velcro (supplied) to align with the velcro on cover

ARMREST / STORAGE COMPARTMENT LID COVER (TR47-24, Oe37-24, SP87-24): F) 4) Position adhesive backed velcro (supplied) on underside of lid to

hinged

- 1) Open armrest / storage compartment
- 2) Slip cover over lid
- 3) Position velcro tabs on cover on both sides of the hinge

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

3) RE-INSTALLATION OF HEADRESTS

align with the velcro tabs on cover and attach

A) Ensure pre-cut holes in seat cover align with holes in headrest base.

positioned through the crevice where lid and armrest / console are

5) Secure the adhesive velcro on the inside back of console

B) Replace headrests

 
2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release - Lift off
- B) Push in side release buttons

I ift off

(If unable to remove consult dealership)

OR



WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.

2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com