If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com SEAT COVERS BY

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM INSTALLATION INSTRUCTIONS FOR TR47-23, TR47-27, TR48-24, TR49-8

OE37-23, OE37-27, OE38-24, OE39-8 SL67-23, SL67-27, SL68-24, SL69-8 SP87-23, SP87-27, SP88-24, SP89-8

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER

- 1) **TR49-8, OE39-8, SP89-8 ONLY -** Remove head rest (see note)
- 2) Open velcro on the side seam to allow for fitting around armrest
- 3) Slip cover over backrest and pull down firmly
- 4) Fasten side velcro

5) Tuck flaps through crevice and attached to velcro at back

Pass side straps through the opening between the molded plastic and the seat and buckle to back flap

4) Adjust straps and buckles to equalize tension

- 6) Adjust all velcro to equalize tension
- 7) Replace headrests (see note)

B) CUSHION COVER

of cover

1) Center cushion cover on seat

2) Pass the front strap under the seat and buckle to the back flap of cover

3) TR49-8, OE39-8, SP39-8, TR47-23, OE37-23, SP87-23, TR47-27, OE37-27, SP87-27:

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release

- Lift off

<u>OR</u>

- B) Push in side release buttons - Lift off
- (If unable to remove consult dealership)

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

tia