

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*

FEATURING

**SUPER-GRIP®**

THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS

FOR

TR47-31, TR47-32  
OE37-31, OE37-32  
SL67-31, SL67-32  
SP87-31

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

**TR47-31 / OE37-31/SP87-31**

**A) BACKREST COVERS:**

- 1) Move seat to most forward position
- 2) Slip cover over backrest – pull down firmly
- 3) Tuck flap through crevice and attach to velcro at back
- 4) Adjust velcro to equalize tension

**TR47-32 / OE37-32**

**B) BACKREST COVERS:**

- 1) Remove headrests (see note)
- 2) Open zipper closure in seat cover
- 3) Install cover under seat belt
- 4) Close zipper (see note)
- 4) Tuck flap through crevice and attach to velcro at back
- 6) Adjust velcro to equalize tension
- 7) Replace headrests (see note)

**C) CUSHION COVER - "40" PORTION:**

- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle
- 3) Pass side straps around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

**D) CUSHION COVER – "60" PORTION:**

- 1) Align cover on seat and position seat belt through opening provided
- 2) Pass the strap that is attached to the flap by the seat belt cut-out through the seat belt opening under the seat and secure with side strap buckle or flap buckle (see note)
- 3) **For TR47-31 / Oe37-31 only.**
  - a) Seat **with built-in cup holder.** Pull down cup holder and position adhesive back velcro to align with velcro attached to back flap under top frame of cup holder
  - b) Seat **without cup holder.** The back flap will adhere to back of seat without the use of adhesive back velcro
  - 4) Pass front strap under seat and buckle
  - 5) Pass side strap around the back of the seat and buckle
  - 6) Adjust straps and buckles to equalize tension

**E) ARMREST / STORAGE COMPARTMENT COVER**

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Position adhesive backed velcro (supplied) to align with the velcro on cover
- 4) Snug cover at back of console so the velcro on the cover is positioned through the crevice where lid and armrest / console are hinged
- 5) Secure the adhesive velcro on the inside back of console

**F) ARMREST / STORAGE COMPARTMENT LID COVER**

- 1) Open armrest / storage compartment
- 2) Slip Cover over lid
- 3) Snug cover at back corners of the lid
- 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro tabs on cover and attach

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)




**3) ZIPPER:**

- A) For ease in installation, the zipper is longer than the cover. Tuck excess zipper under cover.

**4) RE-INSTALLATION OF HEADRESTS**

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

5)

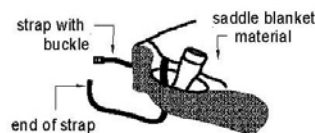

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246  
E-Mail: info@gofia.com Website: www.gofia.com

4-28-08