

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING  
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS  
FOR

TR48-25, TR48-26  
OE38-25, OE38-26  
SL68-25, SL68-26  
SP88-25, SP88-26

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – BUCKETS / “40” PORTION X 2:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest (see warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

**B) CUSHION COVER - BUCKETS / “40” PORTION X 2:**

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 4) Adjust straps and buckles to equalize tension

**C) CUSHION COVER – “20” PORTION (TR48-25 / OE38-25 / SP88-25 ONLY):**

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps around the back of the seat and buckle
- 4) Adjust straps and buckles to equalize tension

**D) BACKREST COVER – “20” PORTION (TR48-25 / OE38-25 / SP88-25 ONLY):**

- 1) Slip cover over backrest and attach velcro

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release
- Lift off

**OR**

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

2-22-10