

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR48-27, OE38-27, SL68-27, SP88-27

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – BUCKETS / “40” PORTION X 2:

- 1) Remove head rest (see note)
- 2) Slip cover over backrest (see warning below)
- 3) Tuck flaps under backrest and attach to Velcro at back
- 4) Adjust Velcro to equalize tension
- 5) Replace headrests (see note)

B) CUSHION COVER - BUCKETS / “40” PORTION X 2:

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
- 4) Adjust straps and buckles to equalize tension

C) BACKREST COVER – “20” PORTION:


- 1) Slip cover over armrest so armrest is covered when in up position. (top of armrest in down position is not covered).
- 2) Snug cover at back of armrest so the velcro on cover is positioned through the crevice where lid and armrest are hinged
- 3) Open armrest/console lid and position adhesive back velcro (supplied) to align with velcro on cover
- 4) Snug cover at front of armrest and position adhesive back velcro tabs (supplied) to the inside well of cup holder
- 5) Snug both sides of the cover and position adhesive back velcro (supplied) inside armrest/console
- 6) Secure all velcros

D) CUSHION/COMPARTMENT COVER– “20” PORTION:

- 1) Open lid
- 2) Slip cover over lid, pull down firmly and velcro at bottom of cover

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

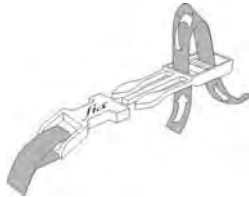


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

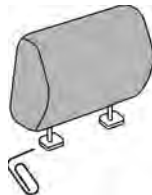

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com