

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS**

FOR

TR47-9, TR47-81, TR48-7, TR48-8, TR48-9, TR48-12  
Oe37-9, Oe37-81, Oe38-7, Oe38-8, Oe38-9, Oe38-12  
SL67-9, SL67-81, SL68-7, SL68-8, SL68-9, SL68-12  
SP87-9, SP87-81, SP88-7, SP88-8, SP88-9

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – BUCKETS / “40” PORTION X 2:**

- 1) Remove head rest (see note)
- 2) Open zipper
- 3) Slip cover over backrest under seat belt
- 4) Close zipper (see note)
- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note)

**B) CUSHION COVER - BUCKETS / “40” PORTION X 2:**

- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle to back flap
- 3) Pass side straps around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

**C) CUSHION COVER – CENTER “20” PORTION X 1:**

- 1) Repeat “B)”

**D) BACKREST COVER – CENTER “20” PORTION X 1**

**For models TR48-8, Oe38-8, SP88-8**

- 1) Open console
- 2) Center cover under armrest
- 3) Position adhesive back Velcro (supplied) to align with the Velcro on side of cover
- 4) Snug cover at back of console so the Velcro on the cover meets the hinge
- 5) Secure the adhesive back Velcro inside the console

**For models TR47-81, Oe37-81, SP87-81**

- 1) Follow steps 1-3 in “D)”
- 2) Snug cover at back of console so the Velcro on the cover is positioned through the crevice where the lid and console are hinged
- 3) secure adhesive Velcro on the inside back of console

**For models TR48-9, Oe38-9, SP88-9**

- 1) Slip cover over backrest and attach Velcro

 
**E) ARMREST/STORAGE COMPARTMENT LID COVER**

**For models TR48-8, Oe38-8, SP88-8**

- 1) Open armrest/storage compartment
- 2) Slip cover over the lid
- 3) Snug cover at back where lid and armrest/console are hinged
- 4) Position adhesive back velcro (supplied) to align with velcro attached to back flap of the cover

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

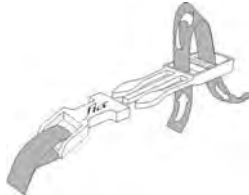


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

 (If unable to remove consult dealership)

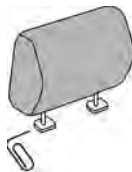

**3) SEATS WITH SIDE ARMRESTS:**

- Locate opening in stretch fabric
- Slip armrest through opening

**4) ZIPPERS:**

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

**5) RE-INSTALLATION OF HEADRESTS**

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438

