SEAT COVERS RY

If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

FOR

TR49-14, Oe39-14, SL69-14, SP89-14

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER - BUCKETS / "40" PORTION X 2:

- 1) Remove head rest (see note)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly

4) Pass side straps around back of seat and buckle to back

4) Position adhesive back Velcro, supplied, to align with the

B) CUSHION COVER - BUCKETS / "40" PORTION X 2:

flap

- 1) Center cover on the seat
- 2) Position seat belt buckle through opening provided
- 3) pass the front strap under seat and buckle to back flap
 - 5) Adjust straps and buckles to equalize tension

C) BACKREST COVER - CENTER "20" PORTION X 1

- 1) Open armrest / storage compartment
- 2) Center cover under armrest

3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged

1) Move "40" portion to most forward position 2) Align cover on seat and position seat belt through opening provided

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release - Lift off
 - OR
- B) Push in side release buttons - Lift off
- (If unable to remove consult dealership)

6	\frown
$\left(\right)$	
A	0
Ø	

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

D) CUSHION COVER - CENTER "20" PORTION X 1

velcro on cover

- 3) Pass front straps under seat and buckle to back flap
- 4) Pass side strap around back of seat and buckle
- 5) adjust straps and buckles to equalize tension

3) RE-INSTALLATION OF HEADRESTS

A) Ensure pre-cut holes in seat cover align with holes in base.

B) Replace headrests

4) Tuck flaps through crevice and attach to Velcro at back 5) Replace headrests (see note)