

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR**

**TR49-15, TR49-16, TR49-17, TR49-19, TR49-20, TR49-25
OE39-15, OE39-16, OE39-17, OE39-19, OE39-20, OE39-25
SP89-15, SP89-16, SP89-17, SP89-19, SP89-20, SP89-25
SL69-15, SL69-16, SL69-17, SL69-19, SL69-20, SL69-25**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Remove head rest (see note below)
- 2) Move seat to most forward position
- 3) Slip cover over backrest and pull down firmly

A) BACKREST COVERS:

- 4) Tuck flaps through crevice and attach to Velcro at back
- 5) Replace headrests (see note below)

B) CUSHION COVERS:

- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat (for TR49-16, TR49-17, TR49-19, Oe39-16, Oe39-17, Oe39-19) **OR**
Pass side straps around back of seat (for TR49-15, TR49-20, Oe39-15, Oe39-20)
- 4) Buckle straps to back flap
- 5) Adjust straps and buckles to equalize tension

C) BACKREST COVER:

- 1) Open armrest / storage compartment
- 2) Center cover under armrest
- 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged
- 4) Position adhesive back Velcro, supplied, to align with the velcro on cover

D) CUSHION COVER – CENTER “20” PORTION (TR49-16, Oe39-16, SP89-16)

- 1) Center cover on the seat
- 2) Pass front straps under seat and buckle to back flap
- 3) Pass side strap around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

E) CUSHION COVER – CENTER “20” PORTION (TR49-15, Oe39-15, SP89-15, TR49-17, Oe39-17, SP89-17)

- 1) Open cushion lid to up position
- 2) Center the cover on the seat
- 3) Tuck the back part of cushion cover through seat crevice
- 4) Pass the side straps under back corners of seat and secure to the end buckles
- 5) Adjust straps/buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off
(If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

5-12-10