

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR**

**TR49-22, TR49-23, TR49-24
OE39-22, OE39-23, OE39-24
SL69-22, SL69-23, SL69-24
SP89-22, SP89-23, SP89-24**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVERS – BUCKETS / “40” PORTIONS:

- | | |
|--|--|
| 1) Remove head rest (see note below) | 4) Tuck flaps through crevice and attach to Velcro at back |
| 2) Move seat to most forward position | 5) Replace headrests (see note below) |
| 3) Slip cover over backrest and pull down firmly | |

B) CUSHION COVERS – BUCKETS / “40” PORTIONS:

- | | |
|---|--|
| 1) Center cover on the seat | 4) Pass the straps around the back and buckle |
| 2) Pass straps through crevice, under seat and buckle to front | 5) Adjust straps and buckles to equalize tension |
| 3) Pass side straps through the opening between the molded plastic and the seat | |

C) BACKREST COVER – “20” PORTION (TR49-23, OE39-23, SP89-23, TR49-24, OE39-24, SP89-24) :

- | | |
|--|---|
| 1) Open armrest / storage compartment | 4) Position adhesive back Velcro, supplied, to align with the velcro on cover |
| 2) Center cover under armrest | |
| 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged | |

D) CUSHION COVER – CENTER “20” PORTION (TR49-24, OE39-24, SP89-24)

- | | |
|---|---|
| 1) Center cover on the seat | 3) Pass side strap around back of seat and buckle |
| 2) Pass front straps under seat and buckle to back flap | 4) Adjust straps and buckles to equalize tension |

E) CUSHION COVER – CENTER “20” PORTION (TR49-23, OE39-23, SP89-23)

- | | |
|---|--|
| 1) Open cushion lid to up position | 4) Pass the side straps under back corners of seat and secure to the end buckles |
| 2) Center the cover on the seat | 5) Adjust straps/buckles to equalize tension |
| 3) Tuck the back part of cushion cover through seat crevice | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

3-26-09