

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING
SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR49-22, TR49-23, TR49-24, TR49-28
OE39-22, OE39-23, OE39-24, OE39-28
SP89-22, SP89-23, SP89-24, SP89-28
SL69-22, SL69-23, SL69-24, SL69-28

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVERS – BUCKETS / “40” PORTIONS:

- | | |
|--|---|
| 1) Remove head rest (see note on reverse) | 4) Tuck flaps through crevice, under plastic panel and up to attach to Velcro at back |
| 2) Move seat to most forward position | 5) Replace headrests (see note on reverse) |
| 3) Slip cover over backrest and pull down firmly | |

B) CUSHION COVERS – BUCKETS / “40” PORTIONS:

- | | |
|---|---|
| 1) Position cover on seat to allow seat belt buckles through opening provided | 3) Pass side straps through the opening between the molded plastic and the seat |
| 2) Pass straps through crevice, under seat and buckle to front | 4) Pass the straps around the back and buckle |
| | 5) Adjust straps and buckles to equalize tension |

C) BACKREST COVER – “20” PORTION

(TR49-23, OE39-23, SP89-23, SL69-23, TR49-24, OE39-24, SP89-24, SL69-24, TR49-28, OE39-28, SP89-28, SL69-28) :

- | | |
|--|---|
| 1) Open armrest / storage compartment | 4) Position adhesive back Velcro, supplied, to align with the velcro on cover |
| 2) Center cover under armrest | |
| 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged | |

D) CUSHION COVER – CENTER “20” PORTION (TR49-24, OE39-24, SP89-24, SL69-24)

- | | |
|---|---|
| 1) Undo seat belt buckle from the elastic loop on seat | 5) Position seat belt buckle through elastic loop on seat cover |
| 2) Center cover on the seat | 6) Adjust straps and buckles to equalize tension |
| 3) Pass front straps under seat and buckle to back flap | |
| 4) Pass side strap around back of seat and buckle | |

E) CUSHION COVER – CENTER “20” PORTION (TR49-23, OE39-23, SP89-23, SL69-23)

- | | |
|---|--|
| 1) Open cushion lid to up position | 4) Pass the side straps under back corners of seat and secure to the end buckles |
| 2) Center the cover on the seat | 5) Adjust straps/buckles to equalize tension |
| 3) Tuck the back part of cushion cover through seat crevice | |

F) CUSHION COVER – CENTER “20” PORTION (TR49-28, OE39-28, SP89-28, SL69-28)

NOTE: INSTALLATION IS EASIER IF YOU MOVE THE DRIVER’S SEAT FORWARD

- | | |
|---|---|
| 1) Undo seat belt buckle from the elastic loop on seat | 4) Pass side strap around back of seat and buckle |
| 2) Center cover on the seat | 5) Position seat belt buckle through elastic loop on seat cover |
| 3) Tuck front of cover between plastic organizer and seat | 6) Adjust straps and buckles to equalize tension |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
 - Lift off
- (If unable to remove consult dealership)



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

