

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

**TR49-35, OE39-35, SL69-35, SP89-35
TR49-36, OE39-36, SL69-36, SP89-36**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

ONE PIECE BUCKET SEAT COVER

**TR49-35, OE39-35, SP89-35 – DRIVER'S SIDE ONLY
TR49-36, OE39-36, SP89-36 – DRIVER AND PASSENGER BUCKETS**

A) BACKREST COVER –

- | | |
|---|--|
| 1) Remove head rest (see note) | 5) Pass the straps attached to center flap through crevice |
| 2) Slip cover over backrest | 6) Move backrest to upright position |
| 3) Pull down firmly (see air bag warning below) | 7) Replace headrest (see note) |
| 4) Recline backrest | |

B) CUSHION COVER

- | | |
|---|---|
| 1) Move seat to most forward position | 5) Pass side straps through the opening between the molded plastic and the seat, buckle to back flap of cover |
| 2) Center cushion cover on seat | 6) Adjust all straps and buckles to equalize tension |
| 3) Pull straps to front from underneath the seat at crevice | |
| 4) Buckle to the front of the seat | |

TWO PIECE BUCKET SEAT COVER

TR49-35, OE39-35, SP89-35 PASSENGER BUCKET ONLY

A) BACKREST COVER –


- | | |
|---|--------------------------------|
| 1) Remove head rest (see note) | 5) Close zipper (see note) |
| 2) Open zipper | 6) Replace headrest (see note) |
| 3) Slip cover over backrest | |
| 4) Pull down firmly (see air bag warning below) | |

B) CUSHION COVER –

- | | |
|---|--|
| 1) Center cover on seat | 4) Adjust straps and buckles to equalize tension |
| 2) Pass the front strap under seat and buckle to back flap | |
| 3) Pass side straps through the opening between the molded plastic and the seat, buckle to back flap of cover | |

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

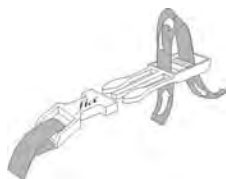

3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)



4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

