

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS**

FOR

TR49-51, OE39-51, SP89-51, SL69-51

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**NOTE: THE TWO CUSHION PIECES ARE NOT IDENTICAL. THE SHORTER PIECE IS FOR THE DRIVER'S SIDE.**

**DRIVER SIDE**

**A) BACKREST COVER –**

- |                                                                    |                                                           |
|--------------------------------------------------------------------|-----------------------------------------------------------|
| 1) Remove head rest (see note)                                     | 5) Attach velcro closure                                  |
| 2) Detach velcro closure on cover                                  | 6) Pull cover down firmly                                 |
| 3) Slip cover over backrest (see air bag warning below)            | 7) Tuck flaps under backrest and attach to velcro at back |
| 4) Place armrest and lumbar support lever through opening on cover | 8) Adjust velcro to equalize tension                      |
|                                                                    | 9) Replace headrests (see note)                           |

**B) CUSHION COVER –**

- |                                                            |                                                  |
|------------------------------------------------------------|--------------------------------------------------|
| 1) Center cover on seat                                    | 4) Pass side straps around the back and buckle   |
| 2) Tuck back flap through crevice                          | 5) Adjust straps and buckles to equalize tension |
| 3) Pass the front strap under seat and buckle to back flap |                                                  |

**PASSENGER SIDE**

**A) BACKREST COVER –**

- |                                                         |                                                |
|---------------------------------------------------------|------------------------------------------------|
| 1) Remove head rest (see note)                          | 4) Pull down firmly                            |
| 2) Open zipper                                          | 5) Fold down backrest. Close zipper (see note) |
| 3) Slip cover over backrest (see air bag warning below) | 6) Replace headrest (see note)                 |

**B) CUSHION COVER –**

- |                                                                                                                 |                                                            |
|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|
| 1) Center cover on seat                                                                                         | 4) Pass the front strap under seat and buckle to back flap |
| 2) Place ends of strap sewn across the cover through the opening between the molded plastic and seat and buckle | 5) Pass side straps around the back and buckle             |
| 3) Tuck back flap into crevice                                                                                  | 6) Adjust straps and buckles to equalize tension           |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**3) ZIPPERS:**

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)



**4) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in base.  
B) Replace headrests

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Make sure that the openings in the sides of the seat covers are positioned so that seat covers DO NOT block or interfere with the deployment of the air bag.
- 2) Constantly check your seat covers to assure they haven't moved and the air bag is properly positioned in the opening.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com