SEAT COVERS BY

If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com

FEATURING SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR TR48-21, TR48-22, TR49-71 OE38-21, OE38-22, OE39-71 SL68-21, SL68-22, SL69-71 SP88-21, SP88-22, SP89-71

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

BACKREST COVER - BUCKETS / "40" PORTION X 2: A)

1) Remove head rest (see note)

2) Slip cover over backrest

3) Tuck flaps under backrest and attach to Velcro at back

5) Replace headrests (see note)

4) Adjust Velcro to equalize tension

4) Adjust straps and buckles to equalize tension

CUSHION COVER - BUCKETS / "40" PORTION X 2: B)

1) Center cover on the seat

2) Pass the front strap under seat. Buckle to back flap

3) Pass side straps through the opening between the molded plastic

and the seat. Buckle to back flap

CUSHION COVER - "20" PORTION (TR48-21 / OE38-21 / SP88-21 ONLY): C)

1) Center cover on the seat

2) Pass the front strap under seat. Buckle to back flap

3) Pass side straps around the back of the seat and buckle 4) Adjust straps and buckles to equalize tension

D) BACKREST COVER - "20" PORTION (TR48-21 / OE38-21 / SP88-21 ONLY):

1) Slip cover over backrest and attach velcro

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) RE-INSTALLATION OF HEADRESTS

A) Ensure pre-cut holes in seat cover align with holes in headrest base.

B) Replace headrests

2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release - Lift off

OR B) - Push in side release buttons - Lift off

(If unable to remove consult dealership)



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

tia