

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*

FEATURING  
**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM  
INSTALLATION INSTRUCTIONS**

FOR  
SL69-74



Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) CUSHION COVER – DRIVER SIDE**

- |  |  |
|--|--|
| 1) Locate cushion cover with openings on both sides  | 4) Pass the side straps under the back corner of the seat and secure to end buckle |
| 2) Position cover so the seat belt buckle goes in smaller hole and pump handle in larger opening | 5) Adjust the straps/buckles to equalize tension for a uniform fit                 |
| 3) Pass the front strap under seat and secure to center buckle                                   |  |

**B) CUSHION COVER – PASSENGER SIDE**

 
- |  |  |
|--|--|
| 1) Position cover so the seat belt buckle goes in hole                             | 4) Adjust the straps/buckles to equalize tension for a uniform fit |
| 2) Pass the front strap under seat and secure to center buckle                     |  |
| 3) Pass the side straps under the back corner of the seat and secure to end buckle |  |

**C) BACKREST COVERS – DRIVER AND PASSENGER SIDES**

- |   |  |
|---|--|
| 1) Remove headrests (see note)                          | 5) Tuck excess material and velcro through crevice |
| 2) Slip cover over backrest (see air bag warning below) | 6) Attach velcro to carpeting on cushion cover     |
| 3) Position side lever on backrest through opening      | 7) Replace headrest (see note)                     |
| 4) Tuck stretch fabric to underside of backrest flap    |  |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

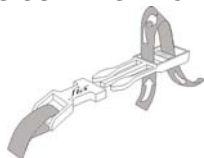


**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in base.  
B) Replace headrests

**2) HEAD REST REMOVAL:**

- Push in side release buttons
- Lift off

 (If unable to remove consult dealership)

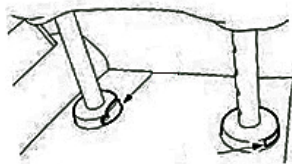

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:**

The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com