

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
FOR

TR42-24, TR42-25

Oe32-24, Oe32-25

SP82-24, SP82-25

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) BACKREST COVER – 60 PORTION:

- | | |
|--|--|
| 1) Remove head rest (see note) | 6) Tuck bottom of cover through crevice under backrest |
| 2) Slip cover over backrest. Holding cushion up in ¾ position allows for better access | 7) Locate straps and secure to buckles on seat cover |
| 3) Pass straps behind the seat straight down | 8) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note) |
| 4) Smooth cover tightly from top to bottom | 9) Repeat on left side |
| 5) FOR TR42-24/OE32-24: Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover | 10) Adjust all straps, buckles and velcro |

B) BACKREST COVER – 40 PORTION:

- | | |
|-------------------------------------|--------------------------------------|
| 1) Repeat steps 1 – 4 from A) above | 2) Repeat steps 6 – 10 from A) above |
|-------------------------------------|--------------------------------------|

C) CUSHION COVER – 60 PORTION AND 40 PORTION:

 
- | | |
|---|--|
| 1) Center cover on the seat | 4) Pass side straps around the back of seat and buckle |
| 2) Tuck back flap through crevice | 5) Adjust straps and buckles to equalize tension |
| 3) Lift seat and pass the front strap under seat and buckle | |

D) ARMREST COVER (TR42-24, Oe32-24, SP82-24)

- | | |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

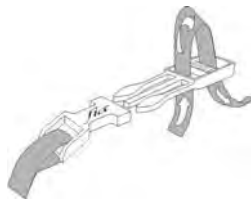

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
B) Replace headrests

 
2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

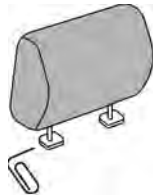

4) BOTTOM FLAP INSTALLATION



WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com