If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS

TR42-91, Oe32-91, SP82-91, SL62-91

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVERS:

- 1) Remove headrests (see note below)
- 2) Detach velcro closure on cover
- 3) Slip cover over backrest under center seat belt
- 4) Attach velcro closure on cover

- 5) Tuck flaps through crevice under backrest
- 6) Fold down backrest and attach flaps on velcro at back of cover
- 7) Replace headrests (see notes)

B) CUSHION COVERS:

- 1) Center cover on seat
- 2) Bring each end of strap sewn across cover under seat and buckle
- 3) Ensure the slit is in line with car seat hook up
- 4) Tuck back flap into crevice

- 5) Pass the back straps under seat and buckle to front and side of cover
- 6) Adjust straps and buckle to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release
 I iff off

<u>OR</u>

B) - Push in side release buttons

- Lift off

(If unable to remove consult dealership)



A) Ensure pre-cut holes in seat cover align with holes in headrest base. B) Replace headrests

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

8-19-10